




DIGITAL VERSATILE DISC PLAYER

DVD-907/927/807/707

SERVICE Manual

DIGITAL VERSATILE DISC PLAYER

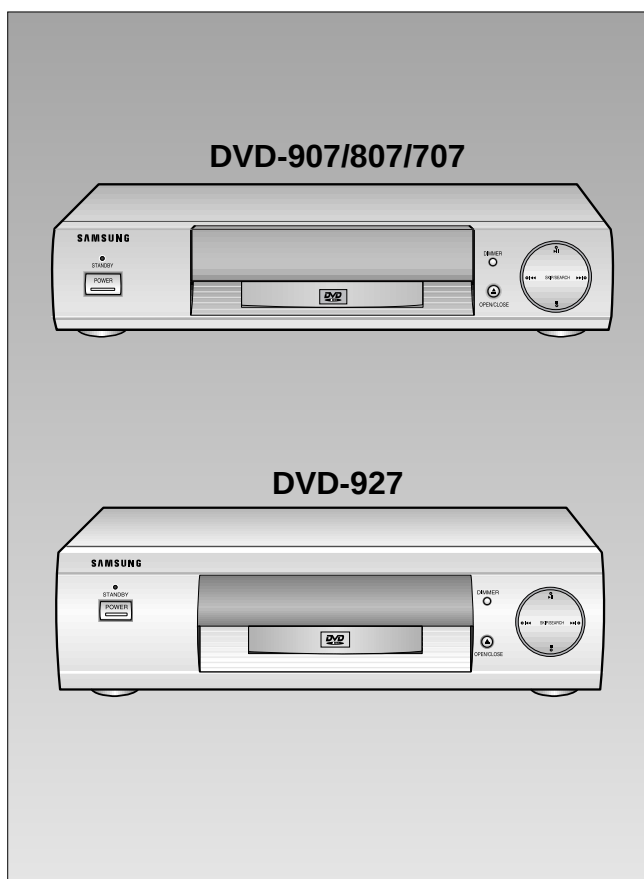



CONTENTS

1. Precautions
2. Reference Information
3. Product Specification
4. Operating Instructions
5. Disassembly and Reassembly
6. IC Descriptions
7. Circuit Descriptions
8. Troubleshooting
9. Exploded Views and Parts List
10. Packing Diagram
11. Electrical Parts List
12. Block Diagram
13. PCB Diagrams
14. Wiring Diagram
15. Schematic Diagrams


15-1 MAIN Rev.1


15-1-1 MICOM

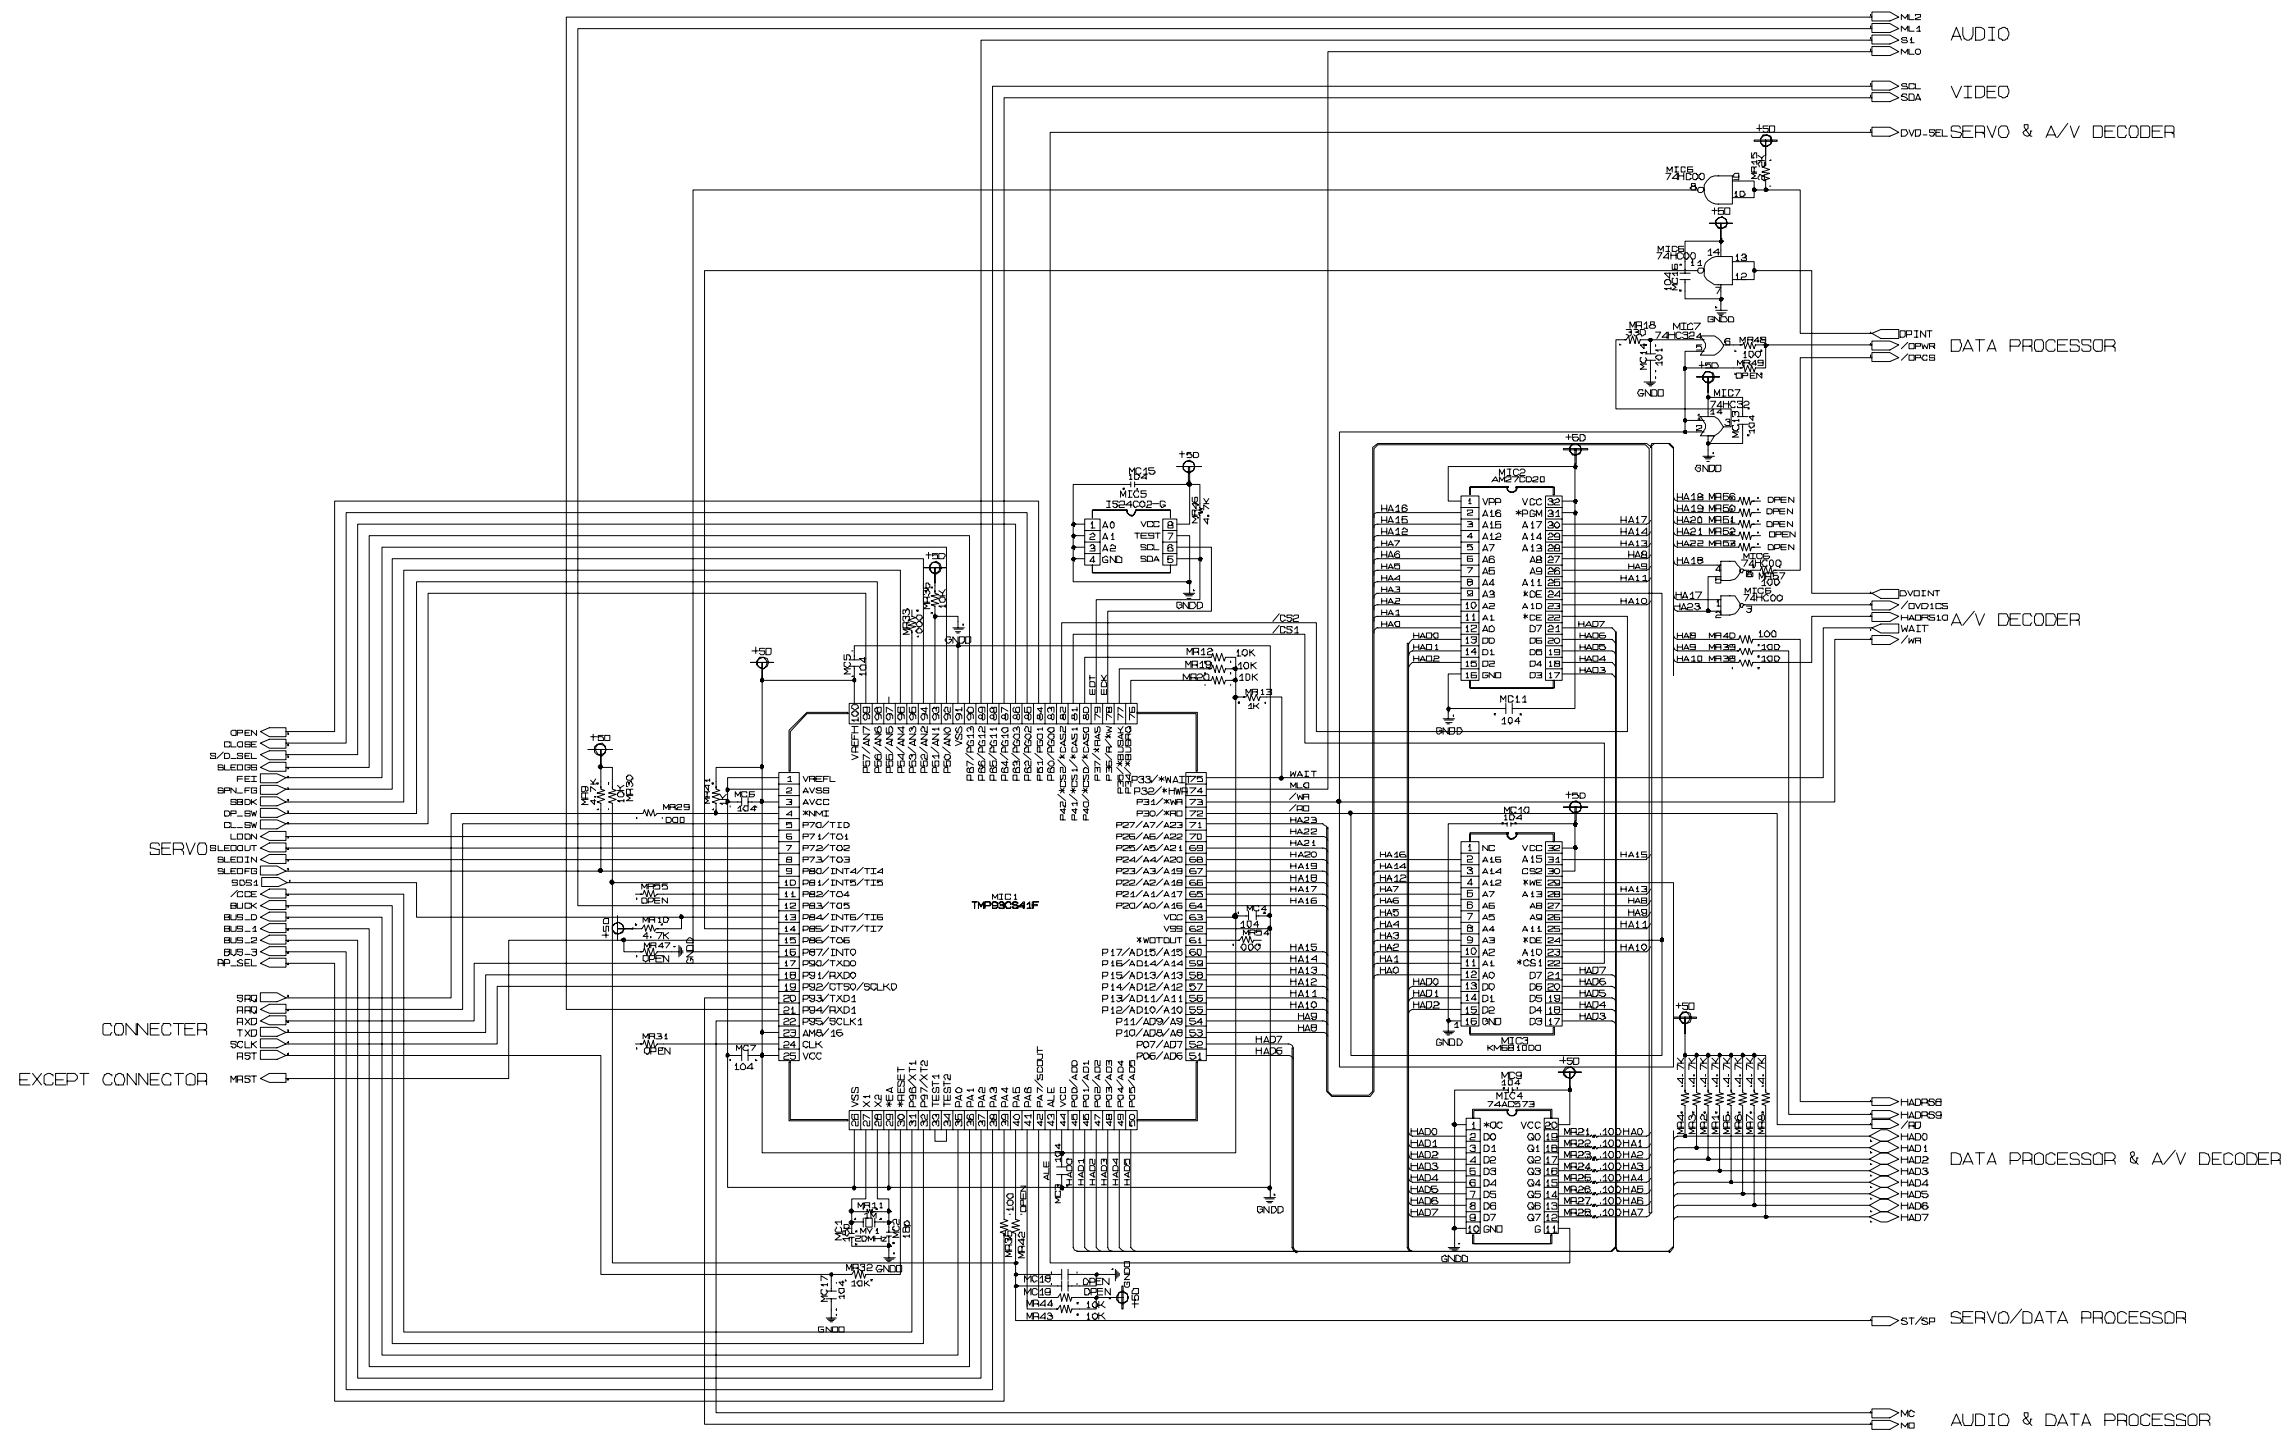

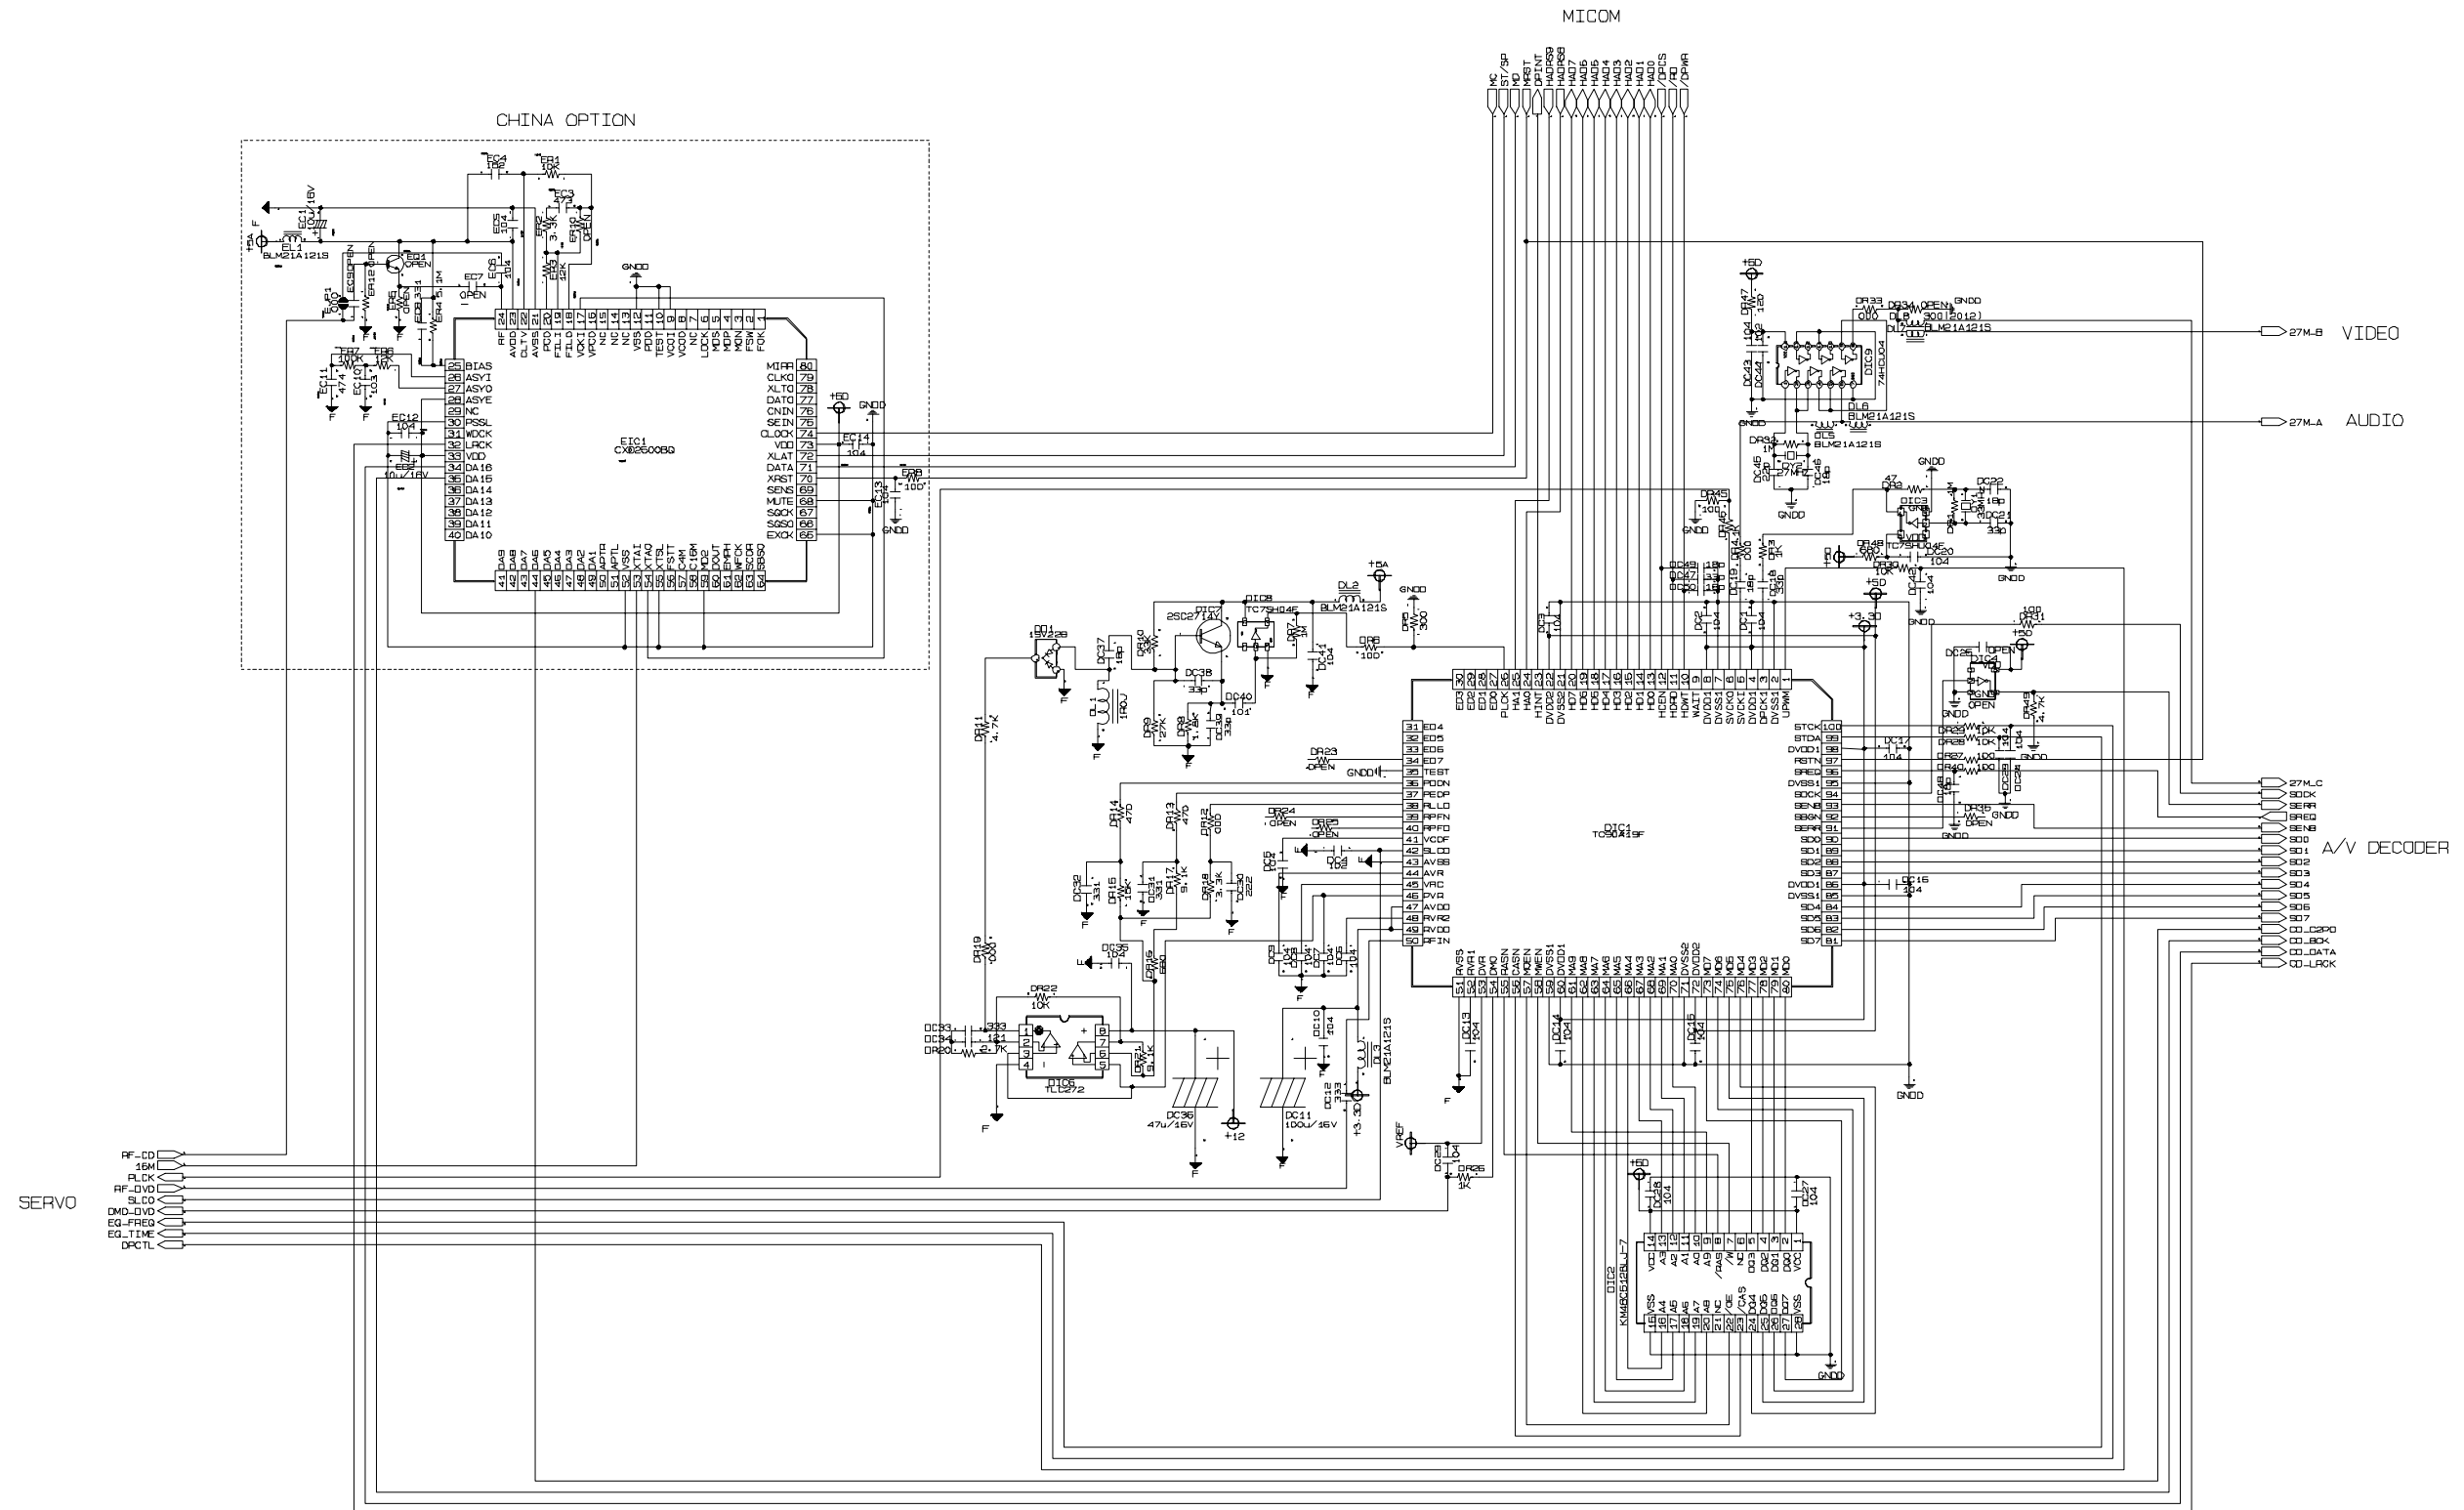


15-1-4 A/V DECODER

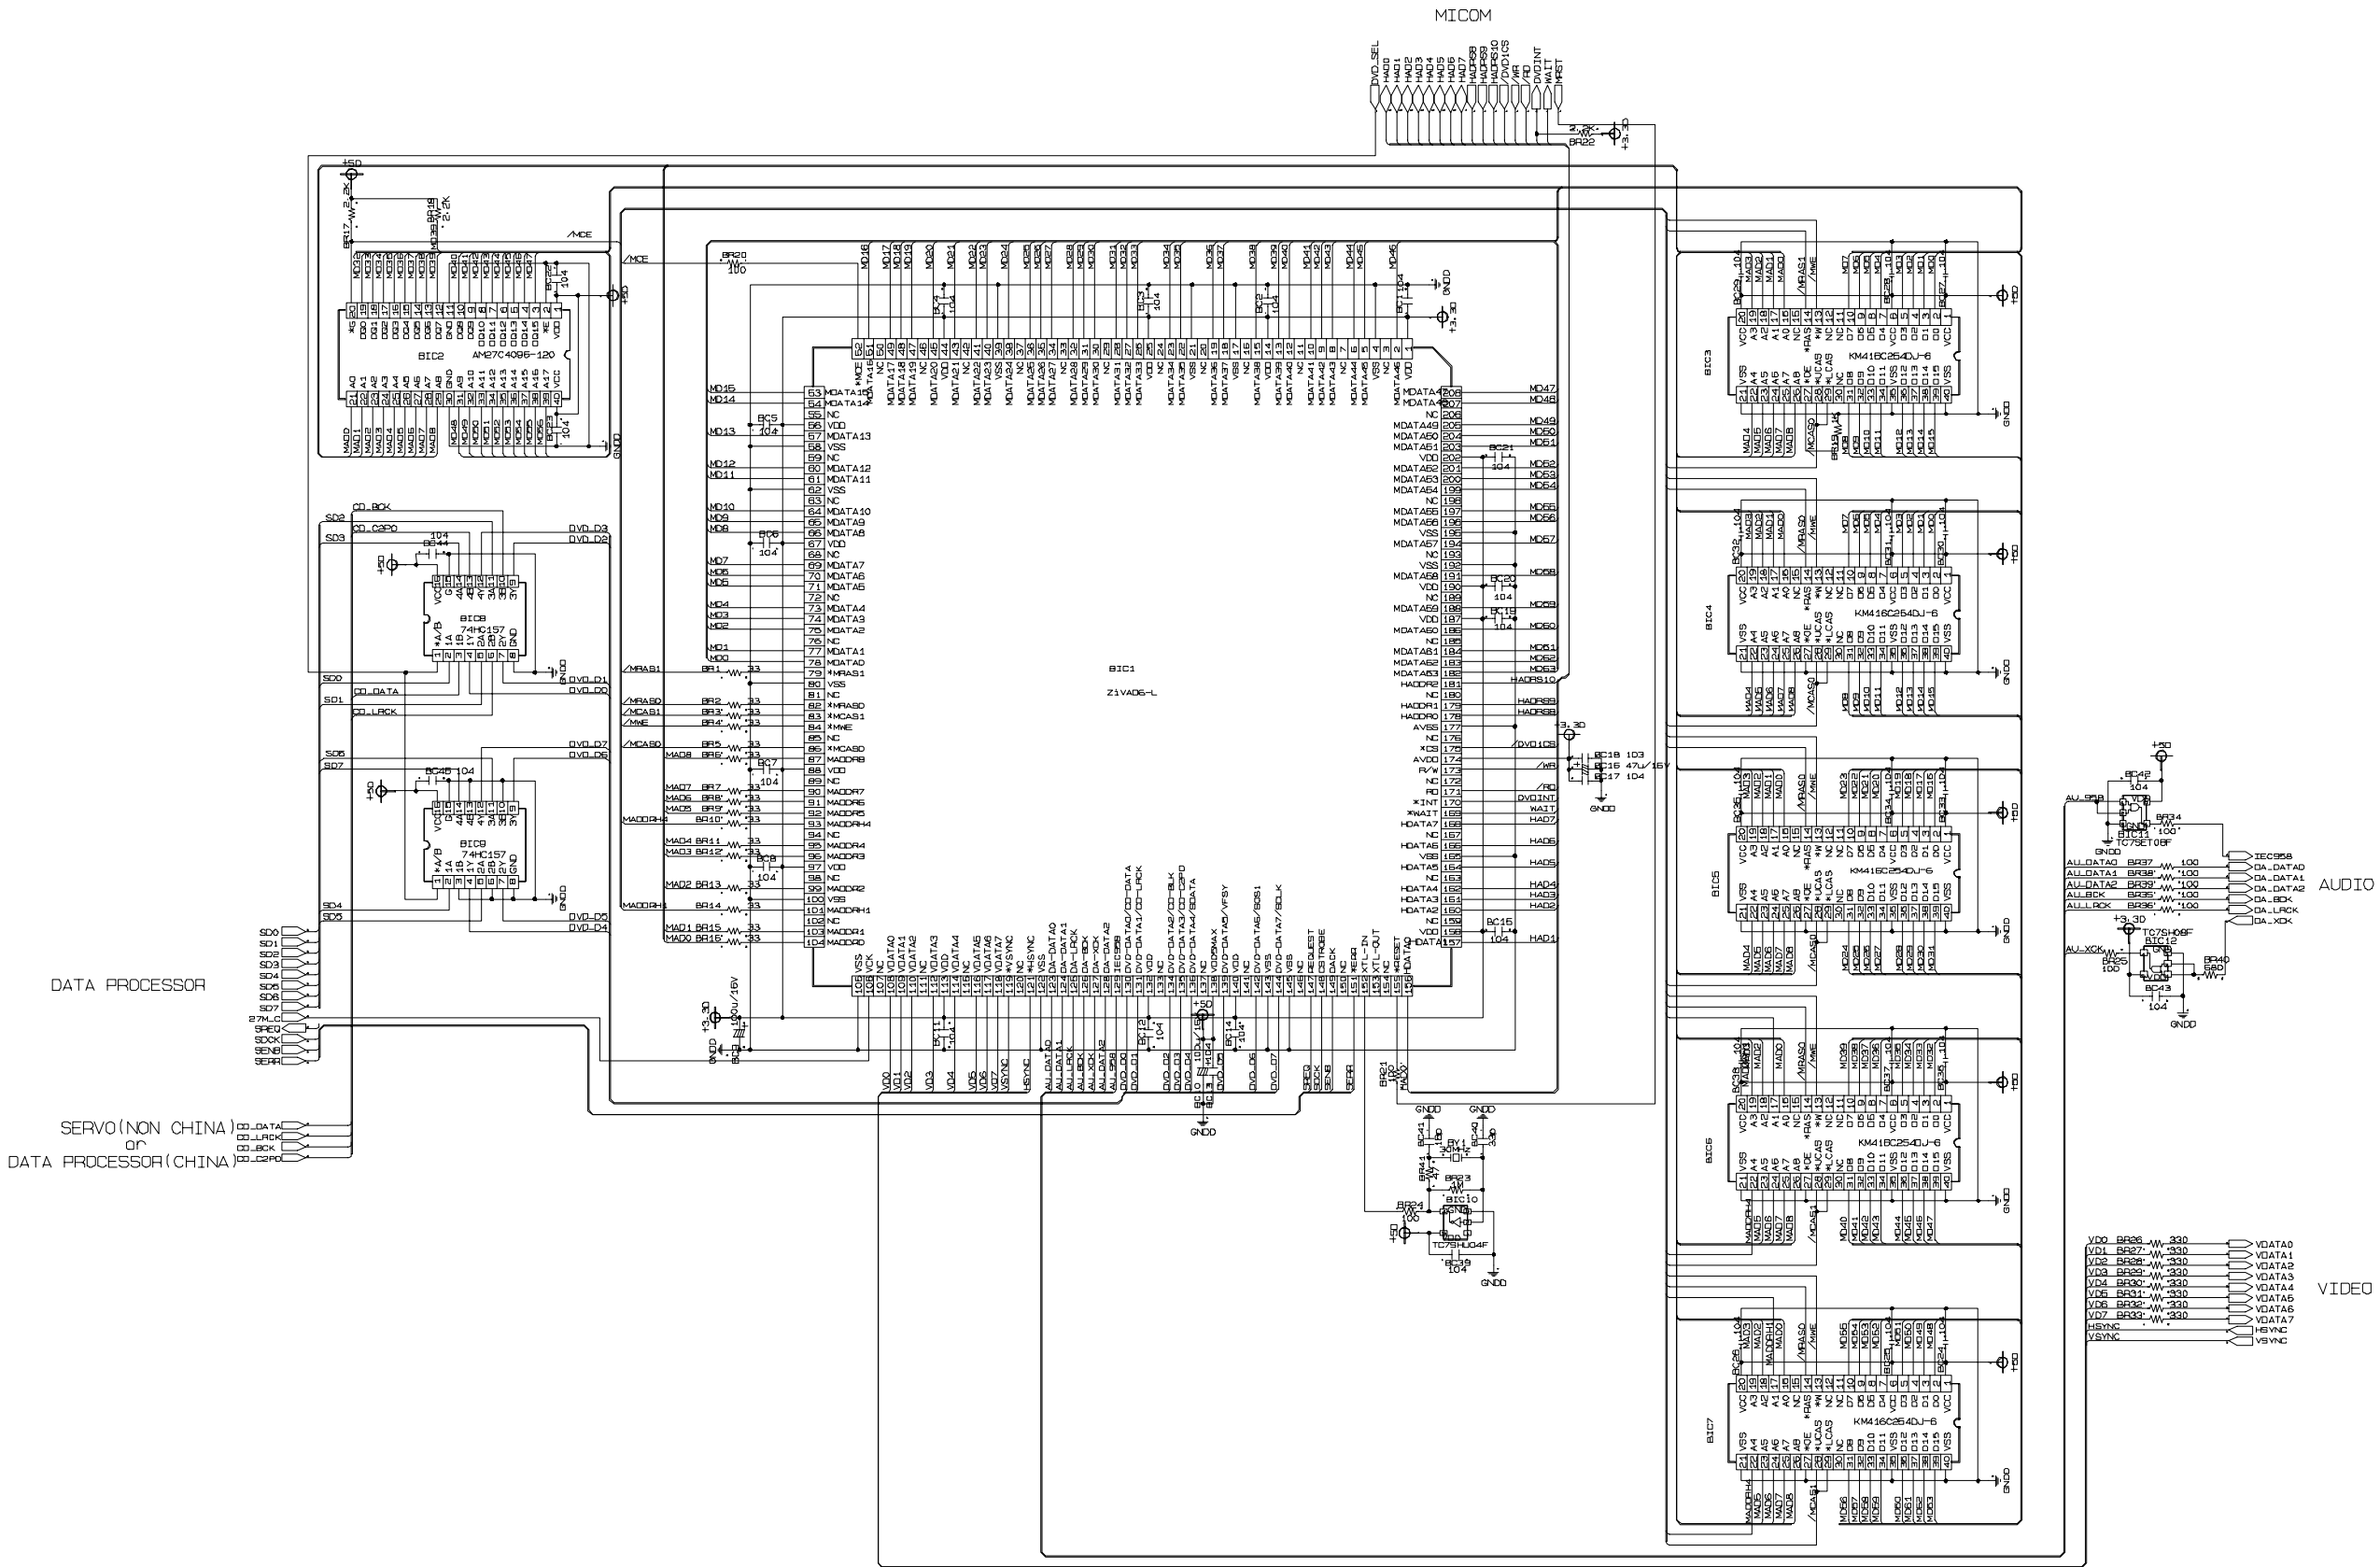


 


15-1-7 CONNECTOR

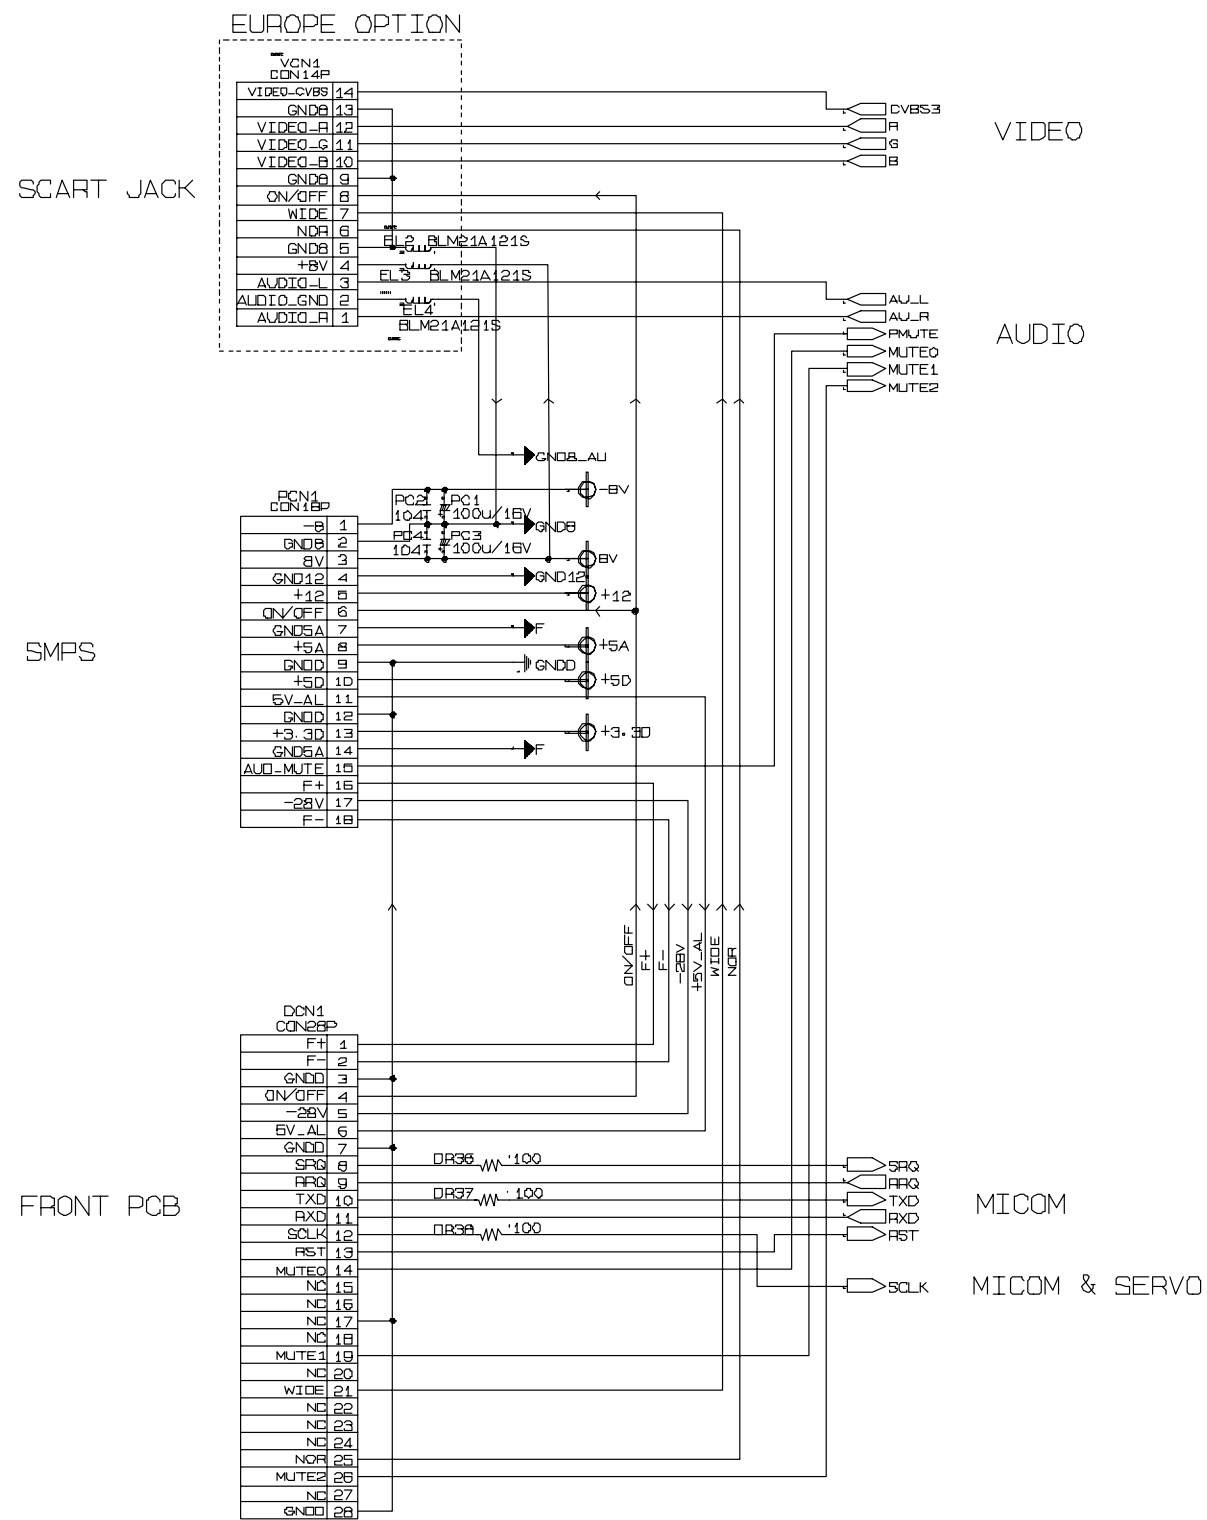


15-2-2 DVD-927

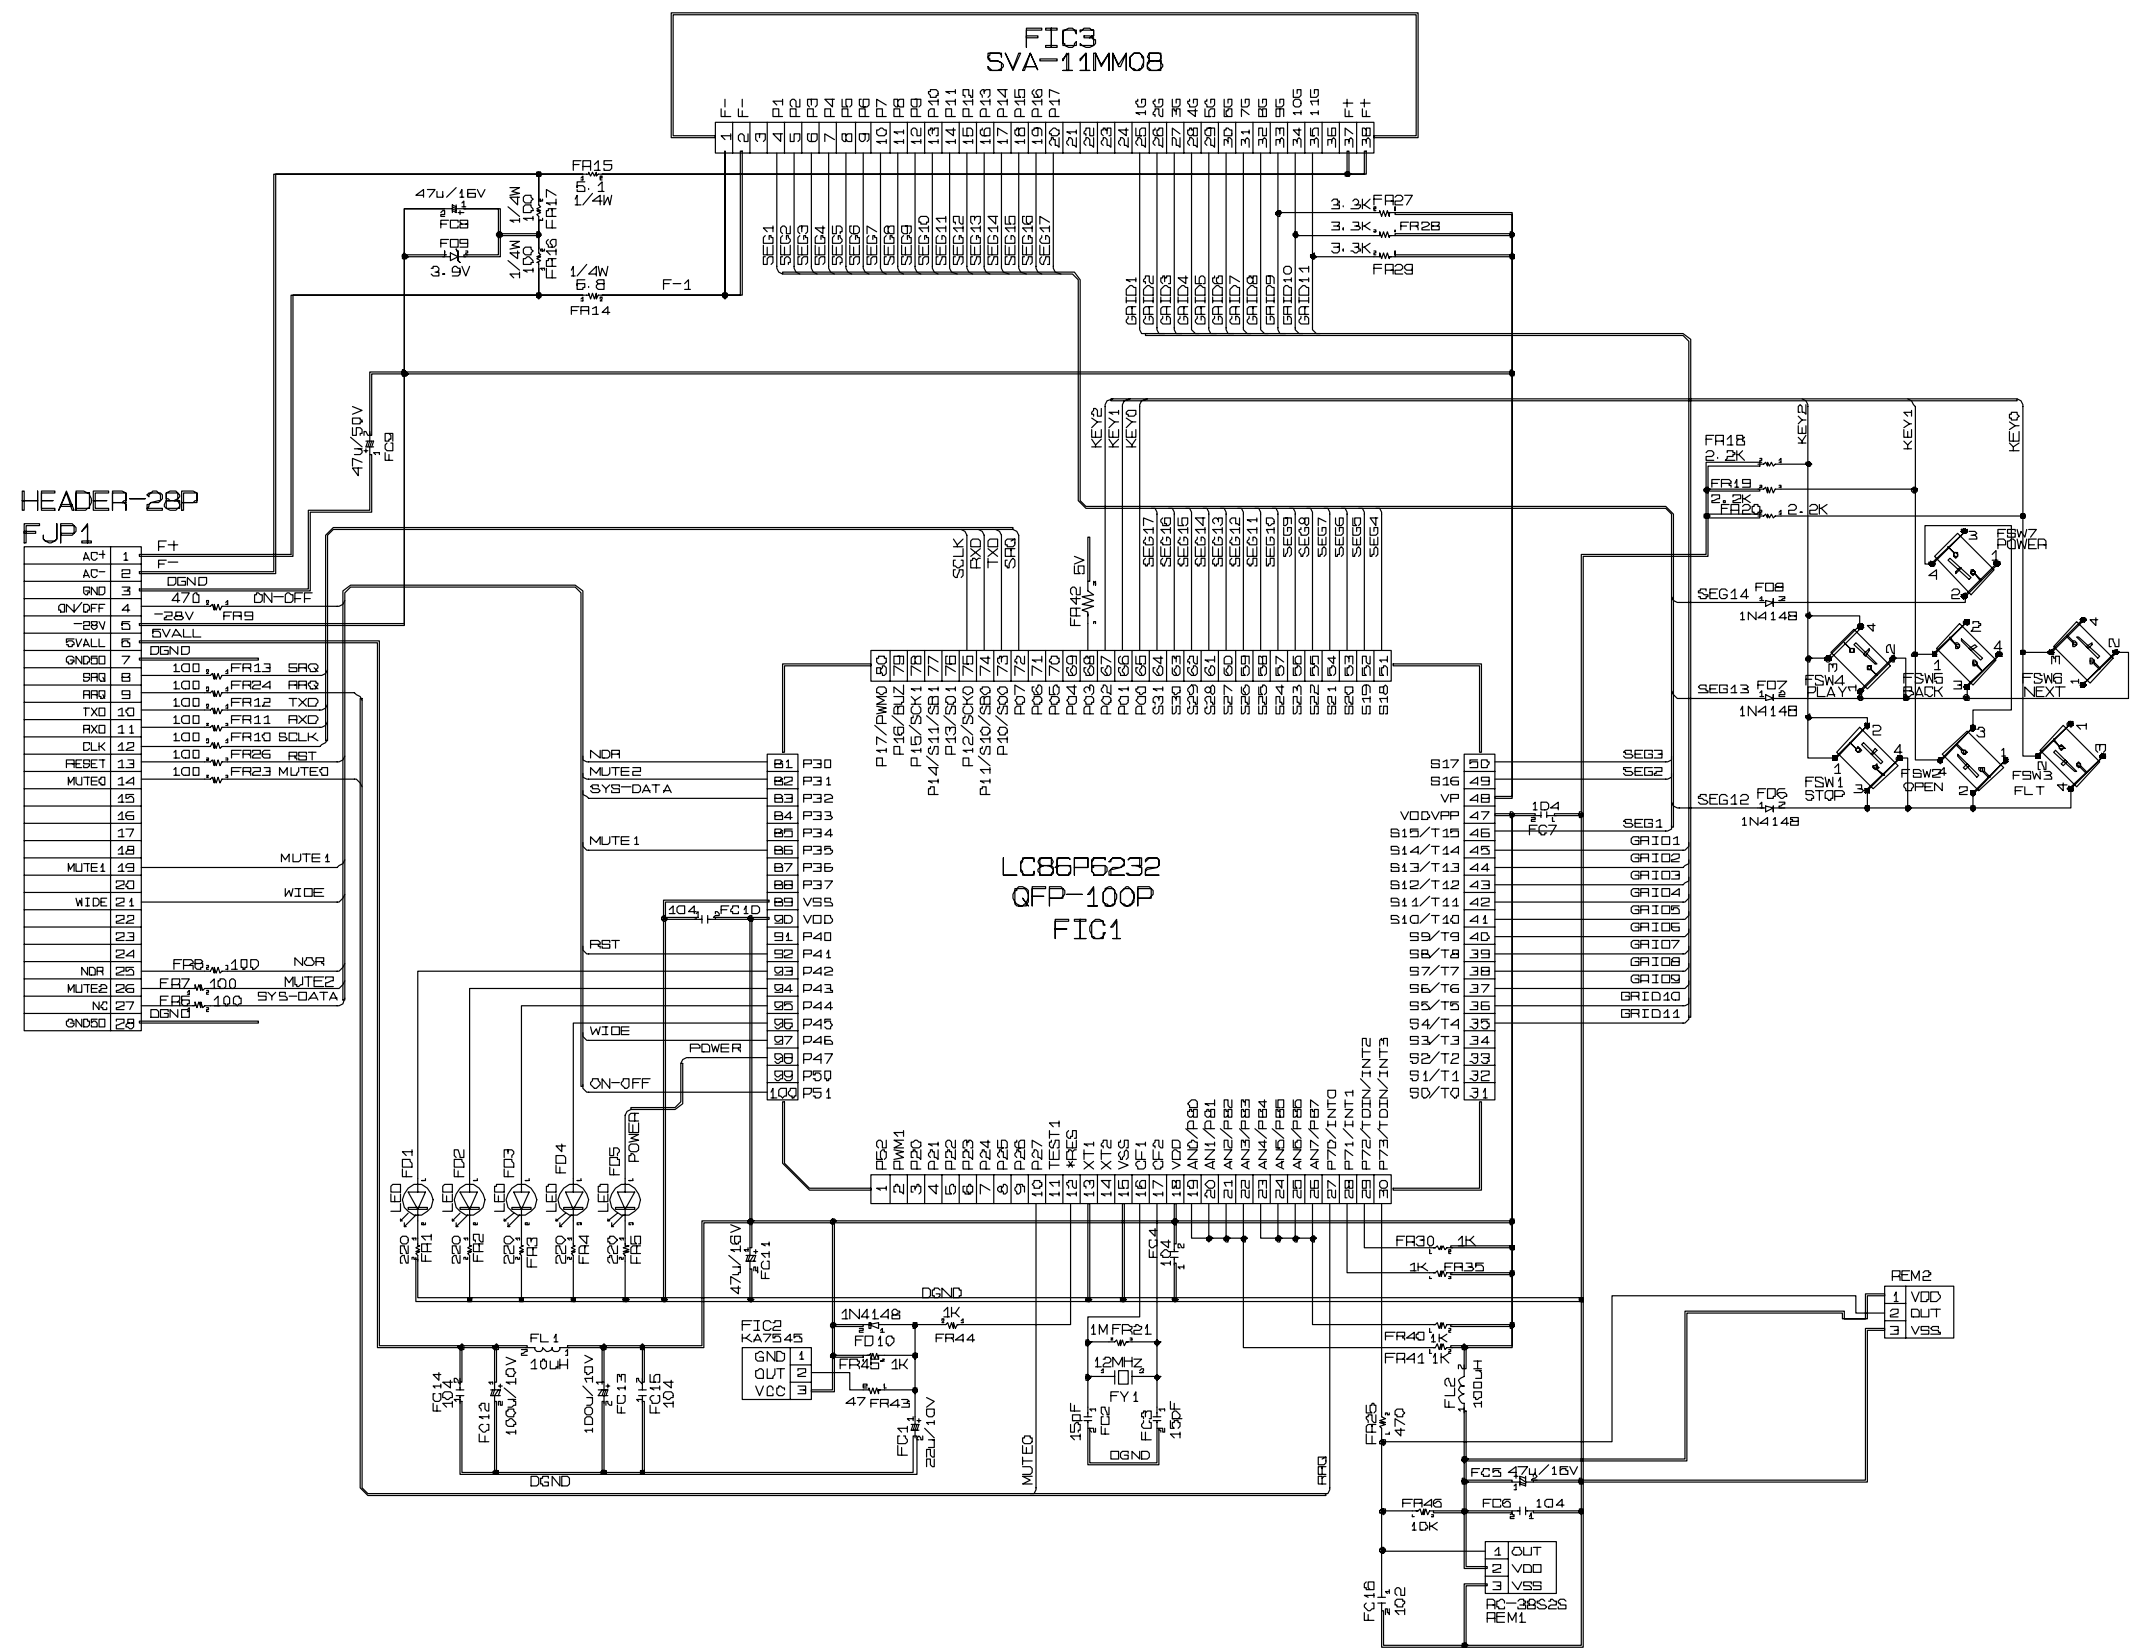


15-3 SMPS

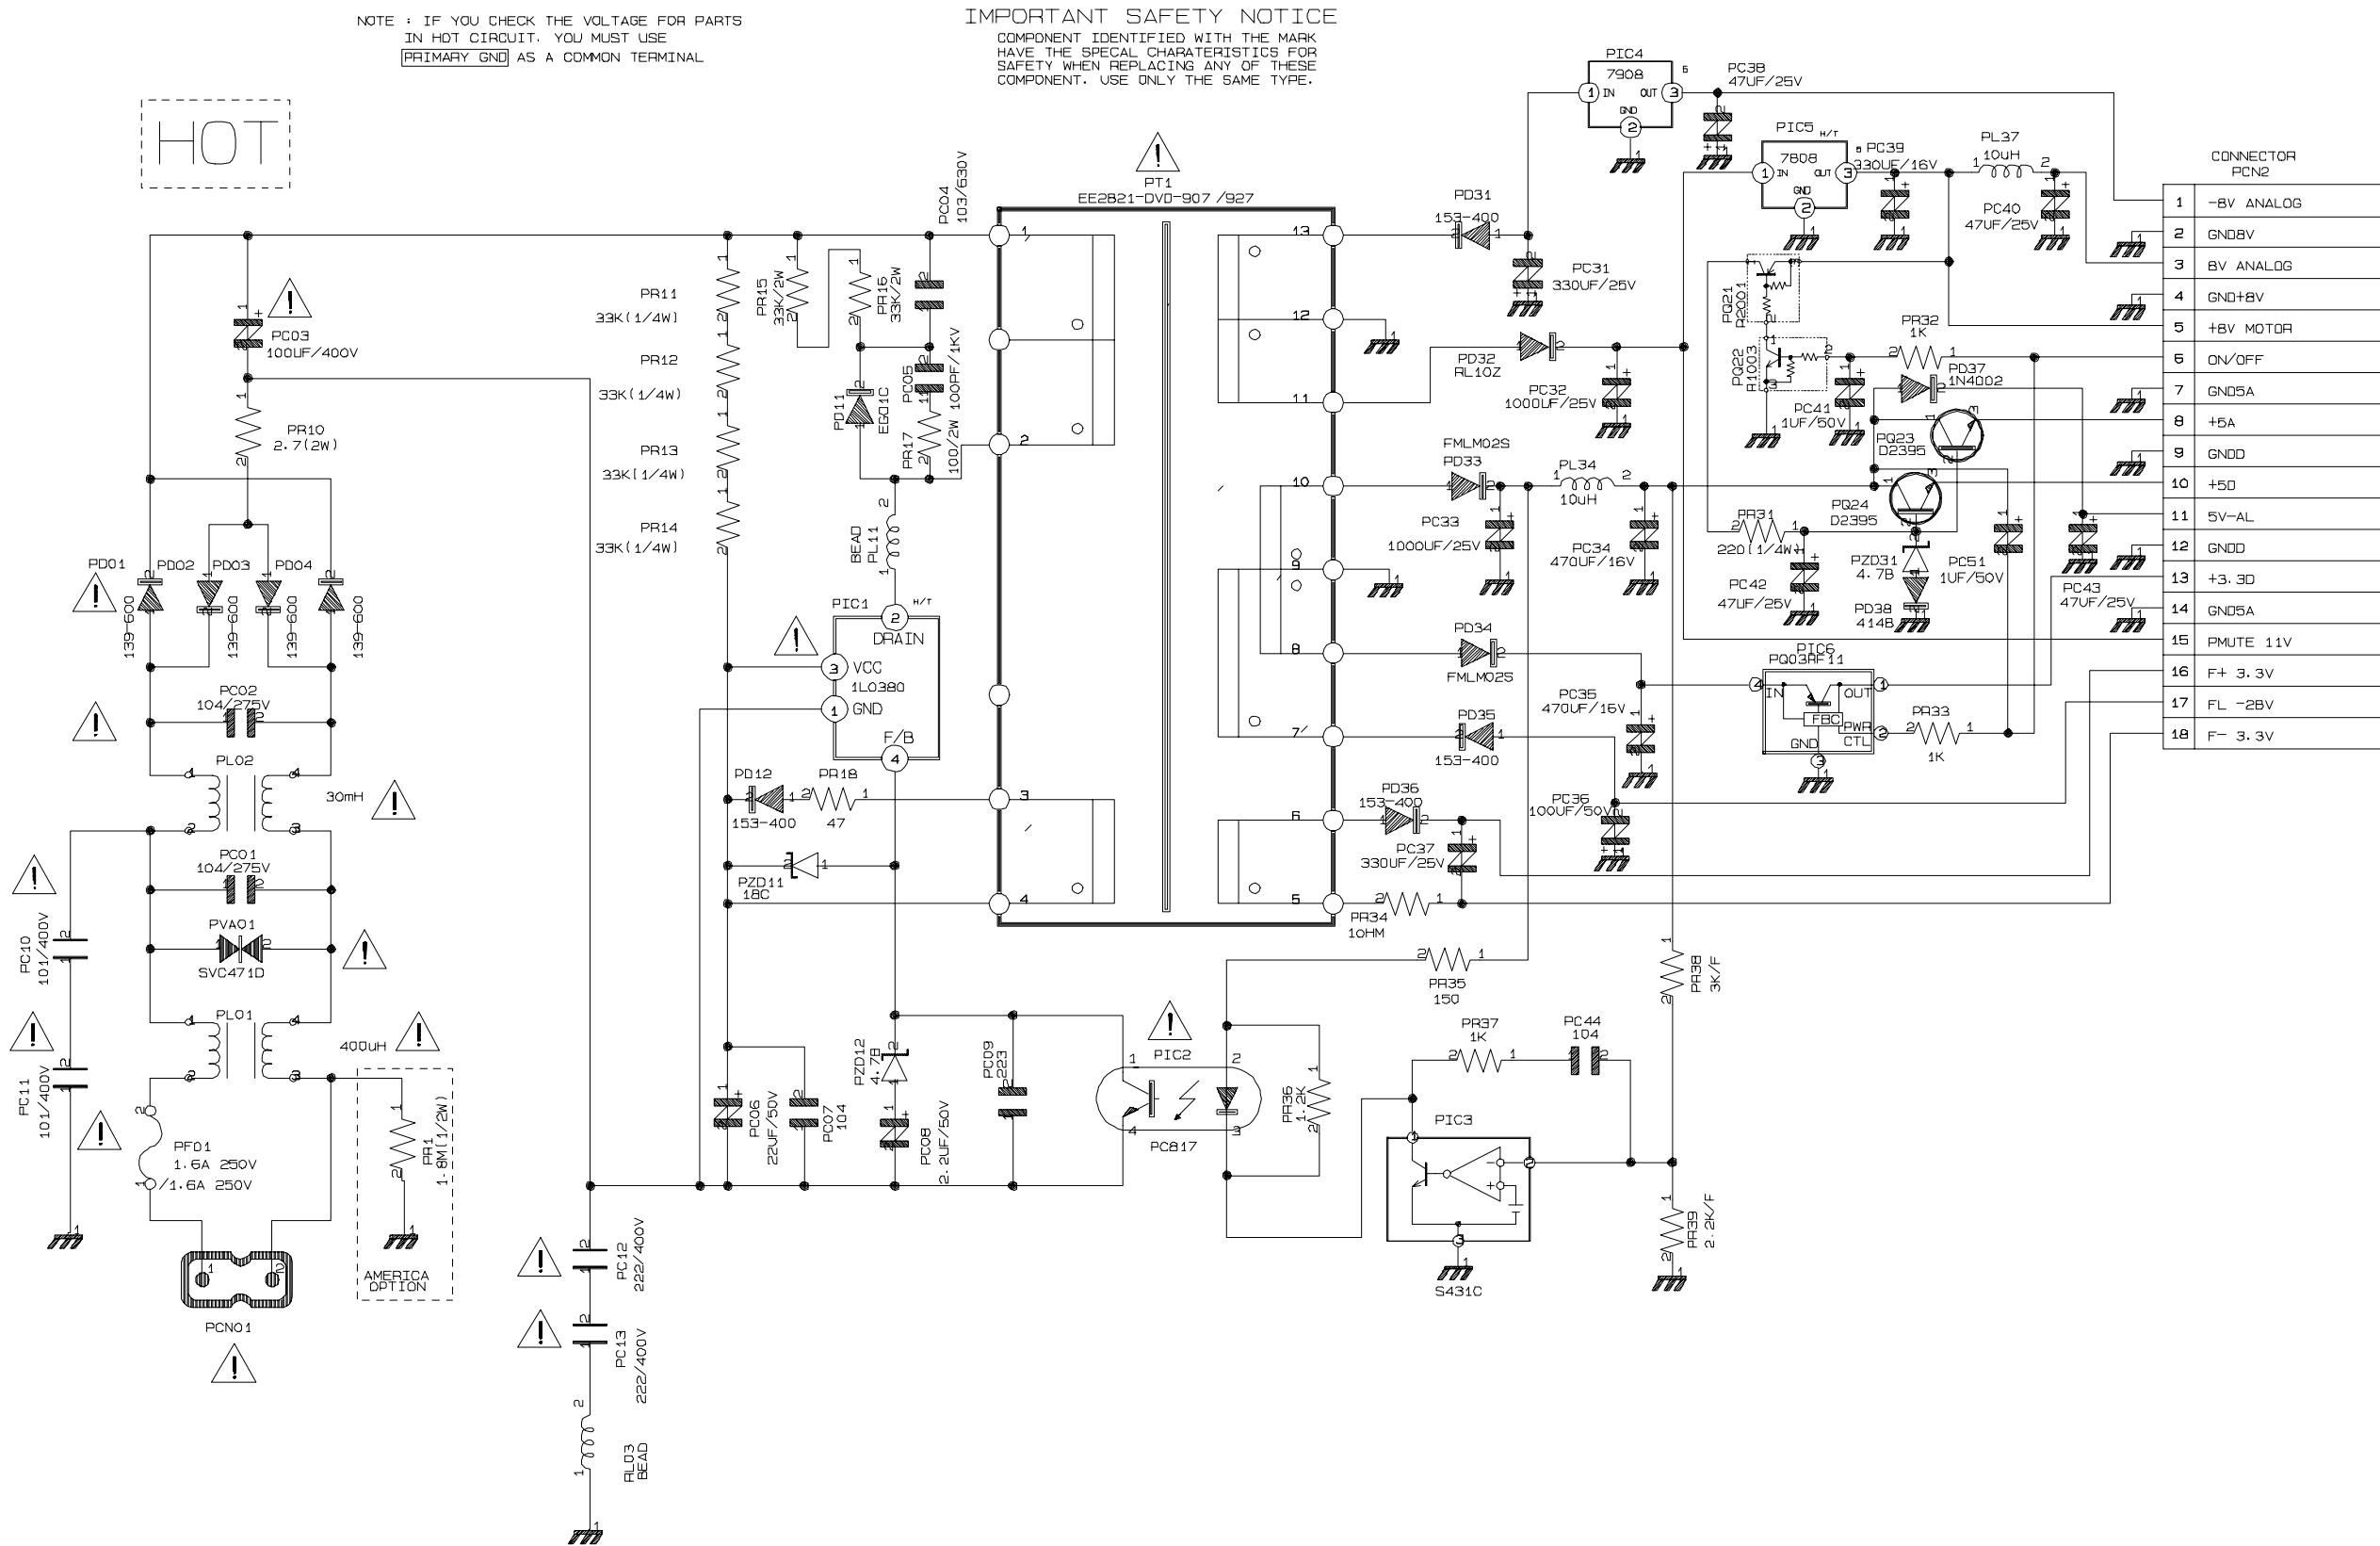

 


15-5 MAIN Rev.2


15-5-1 MICOM

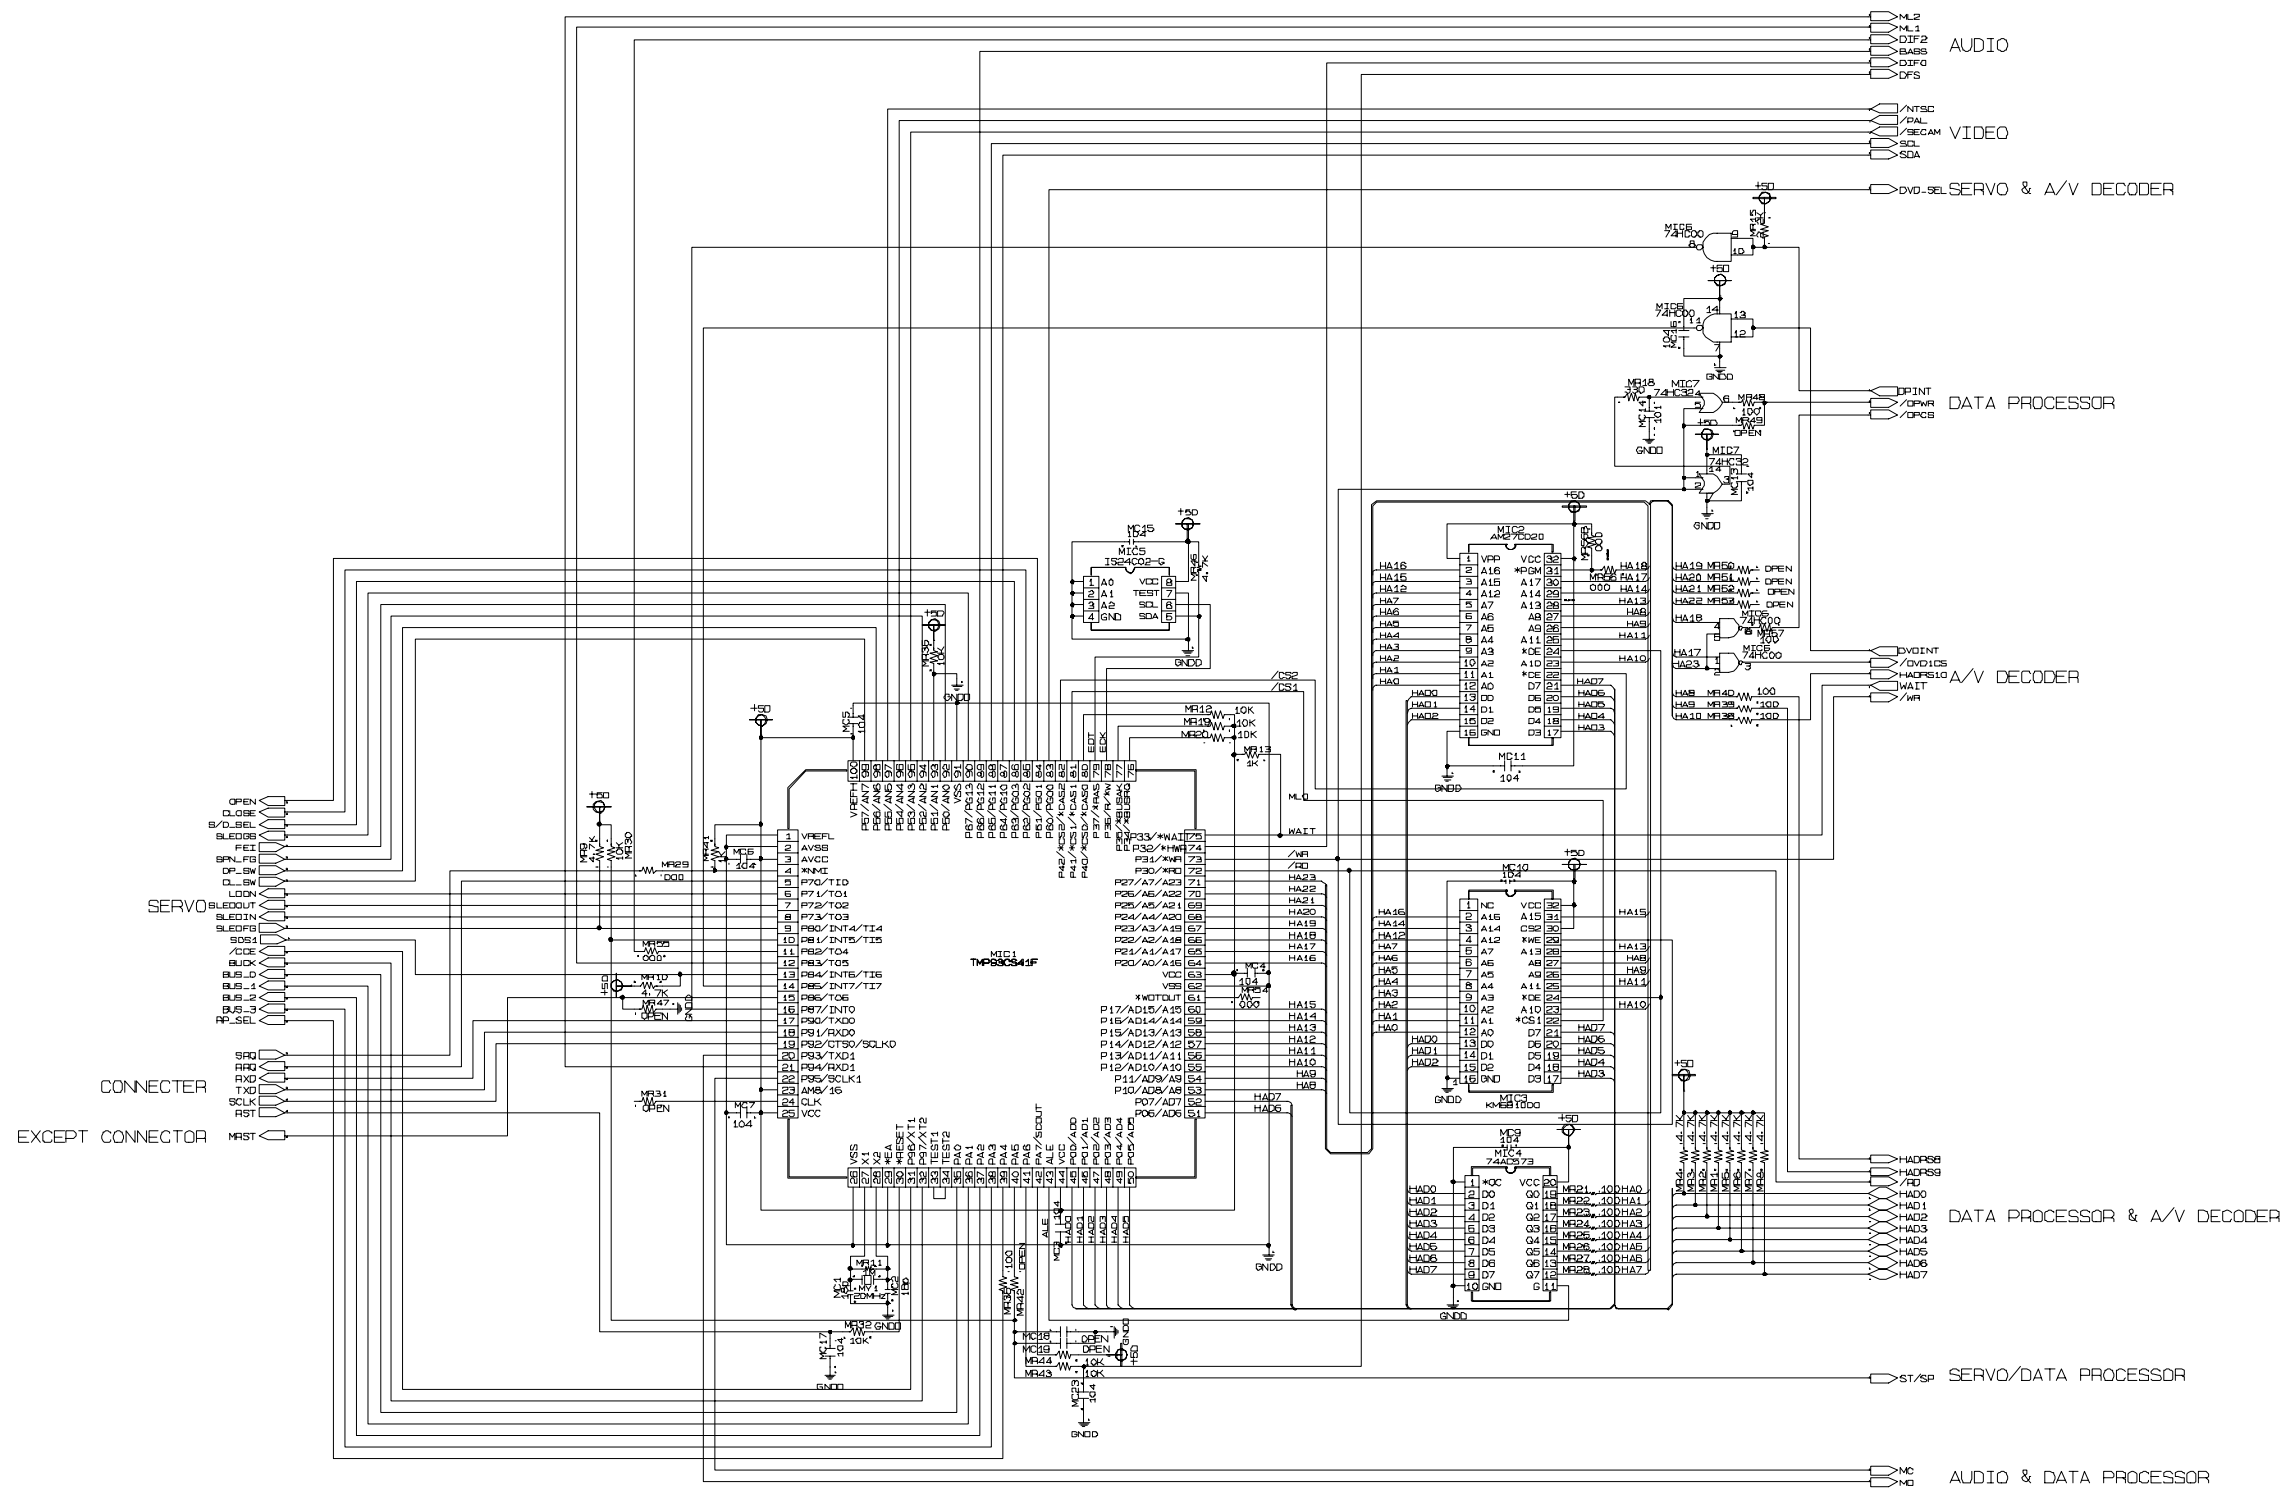


15-5-3 DATA PROCESSOR

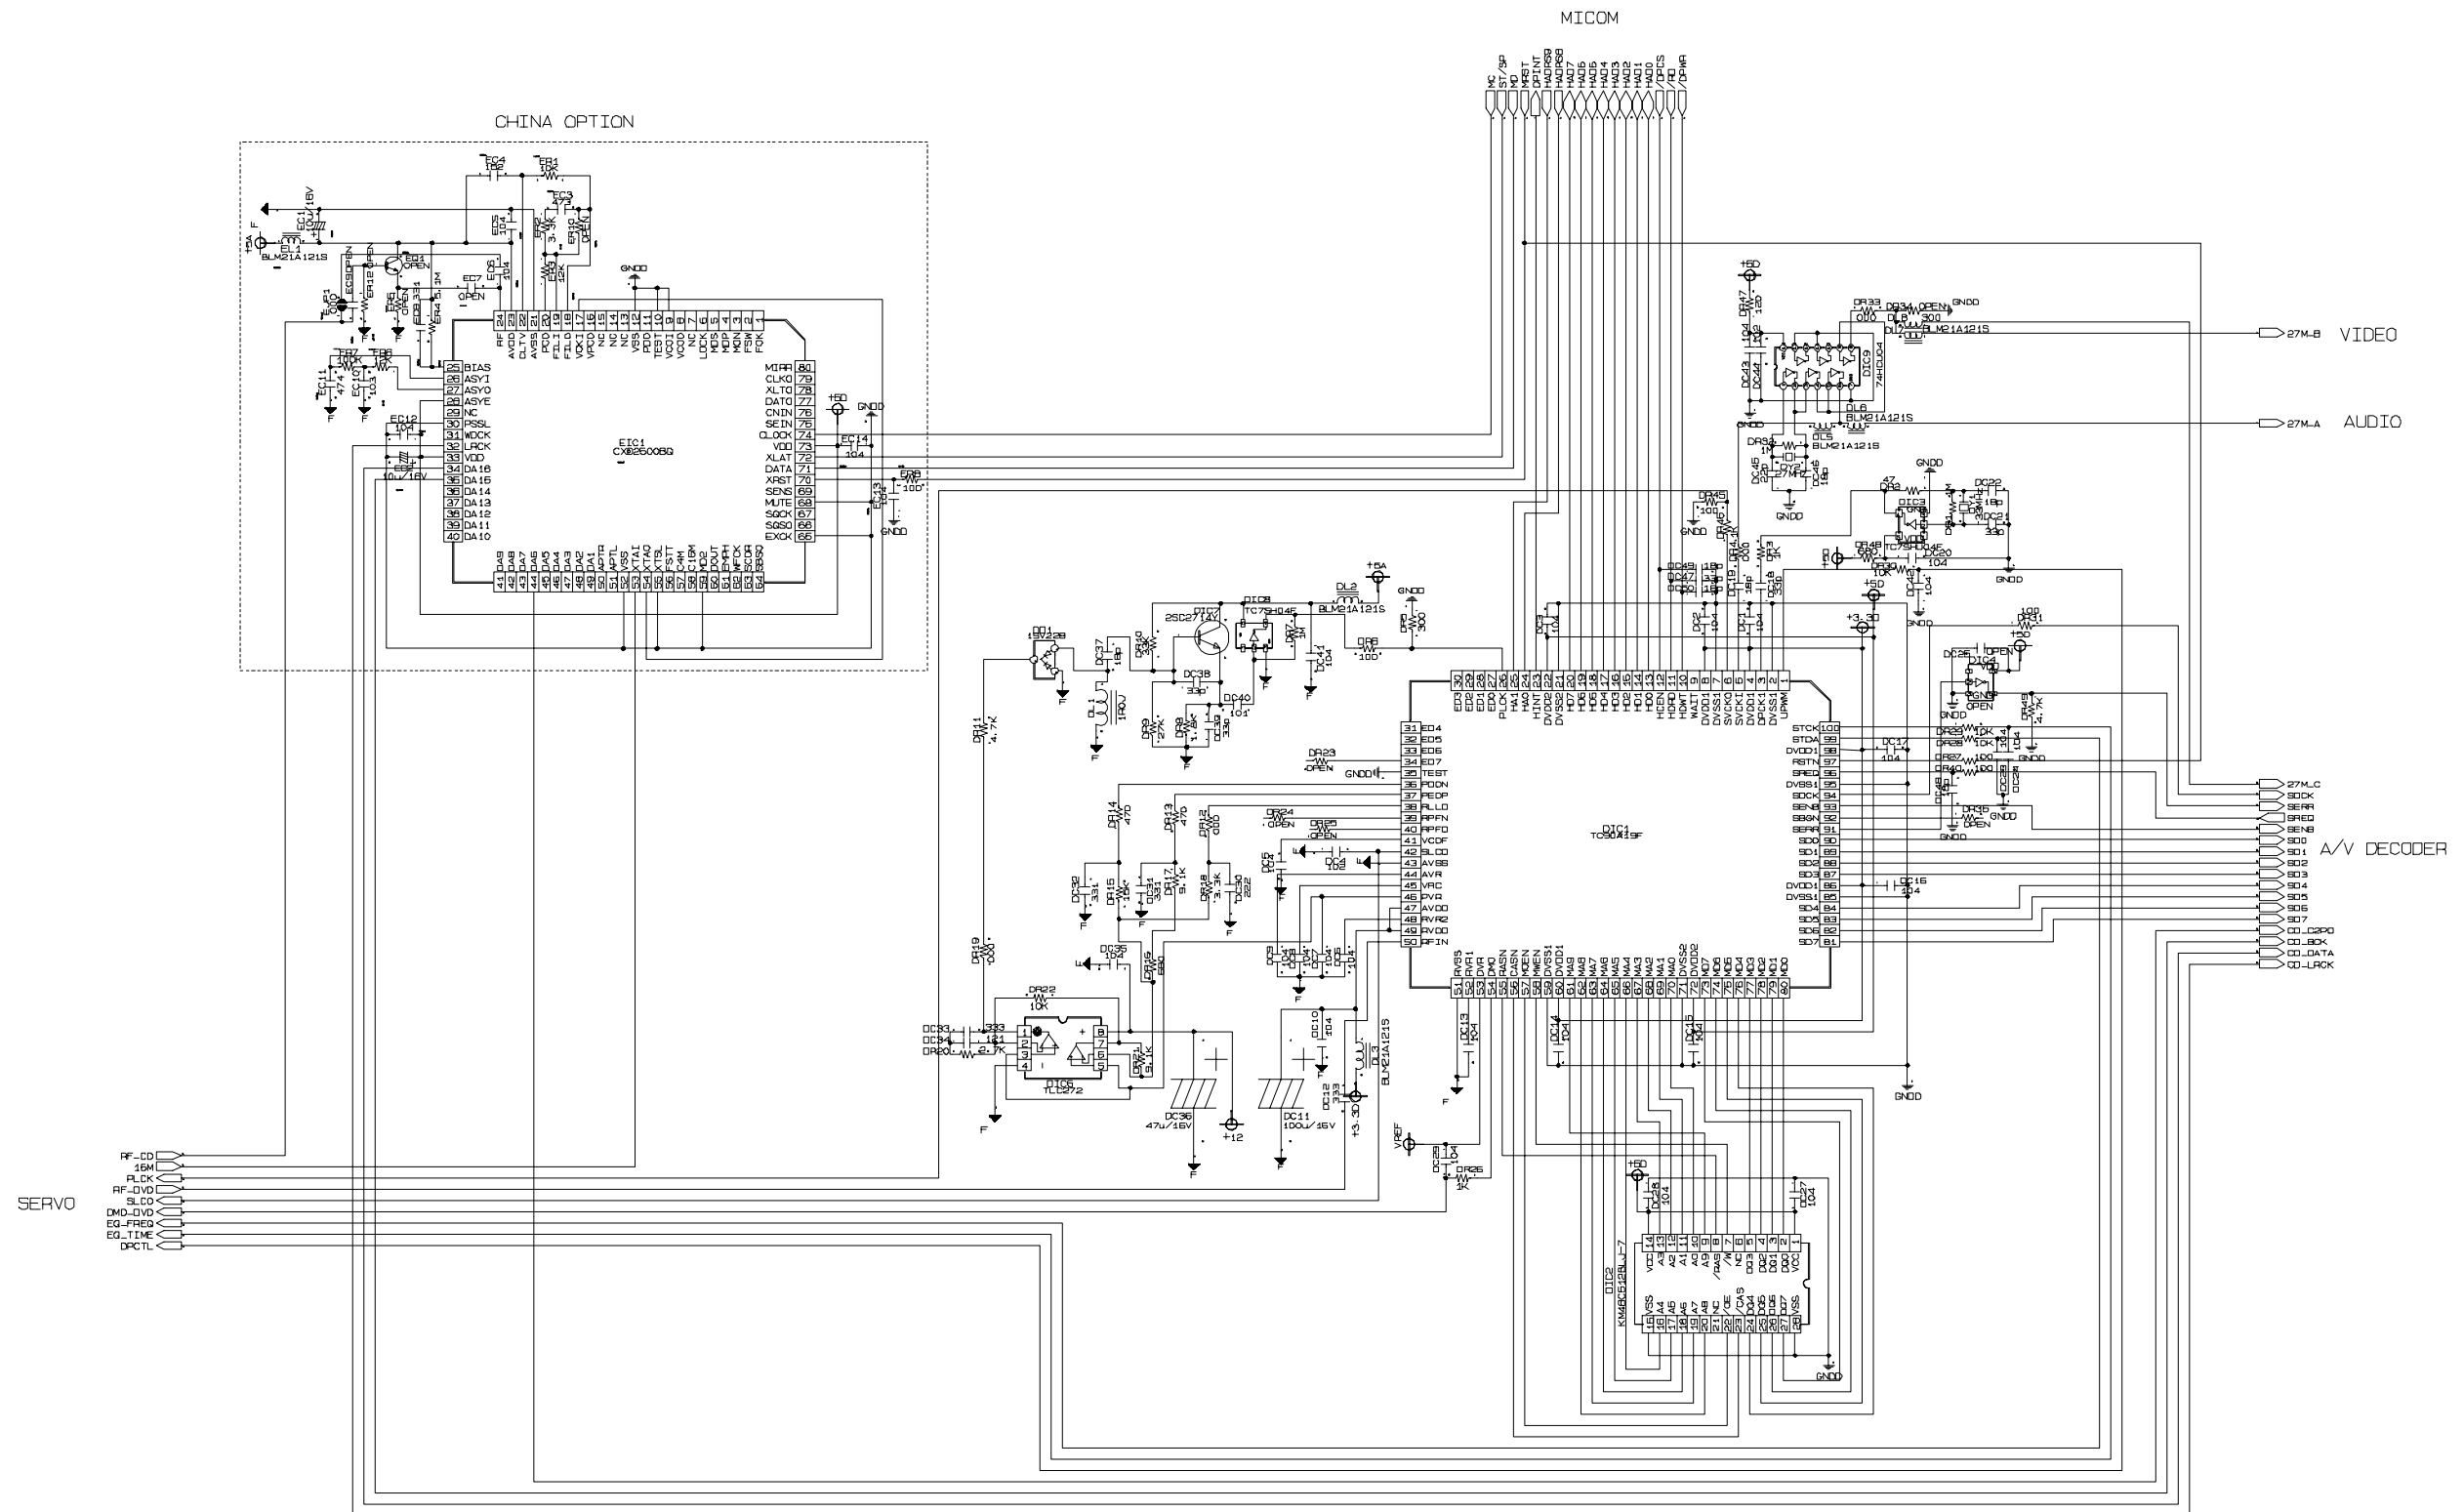


15-5-5-2 AUDIO (DVD-807/707)

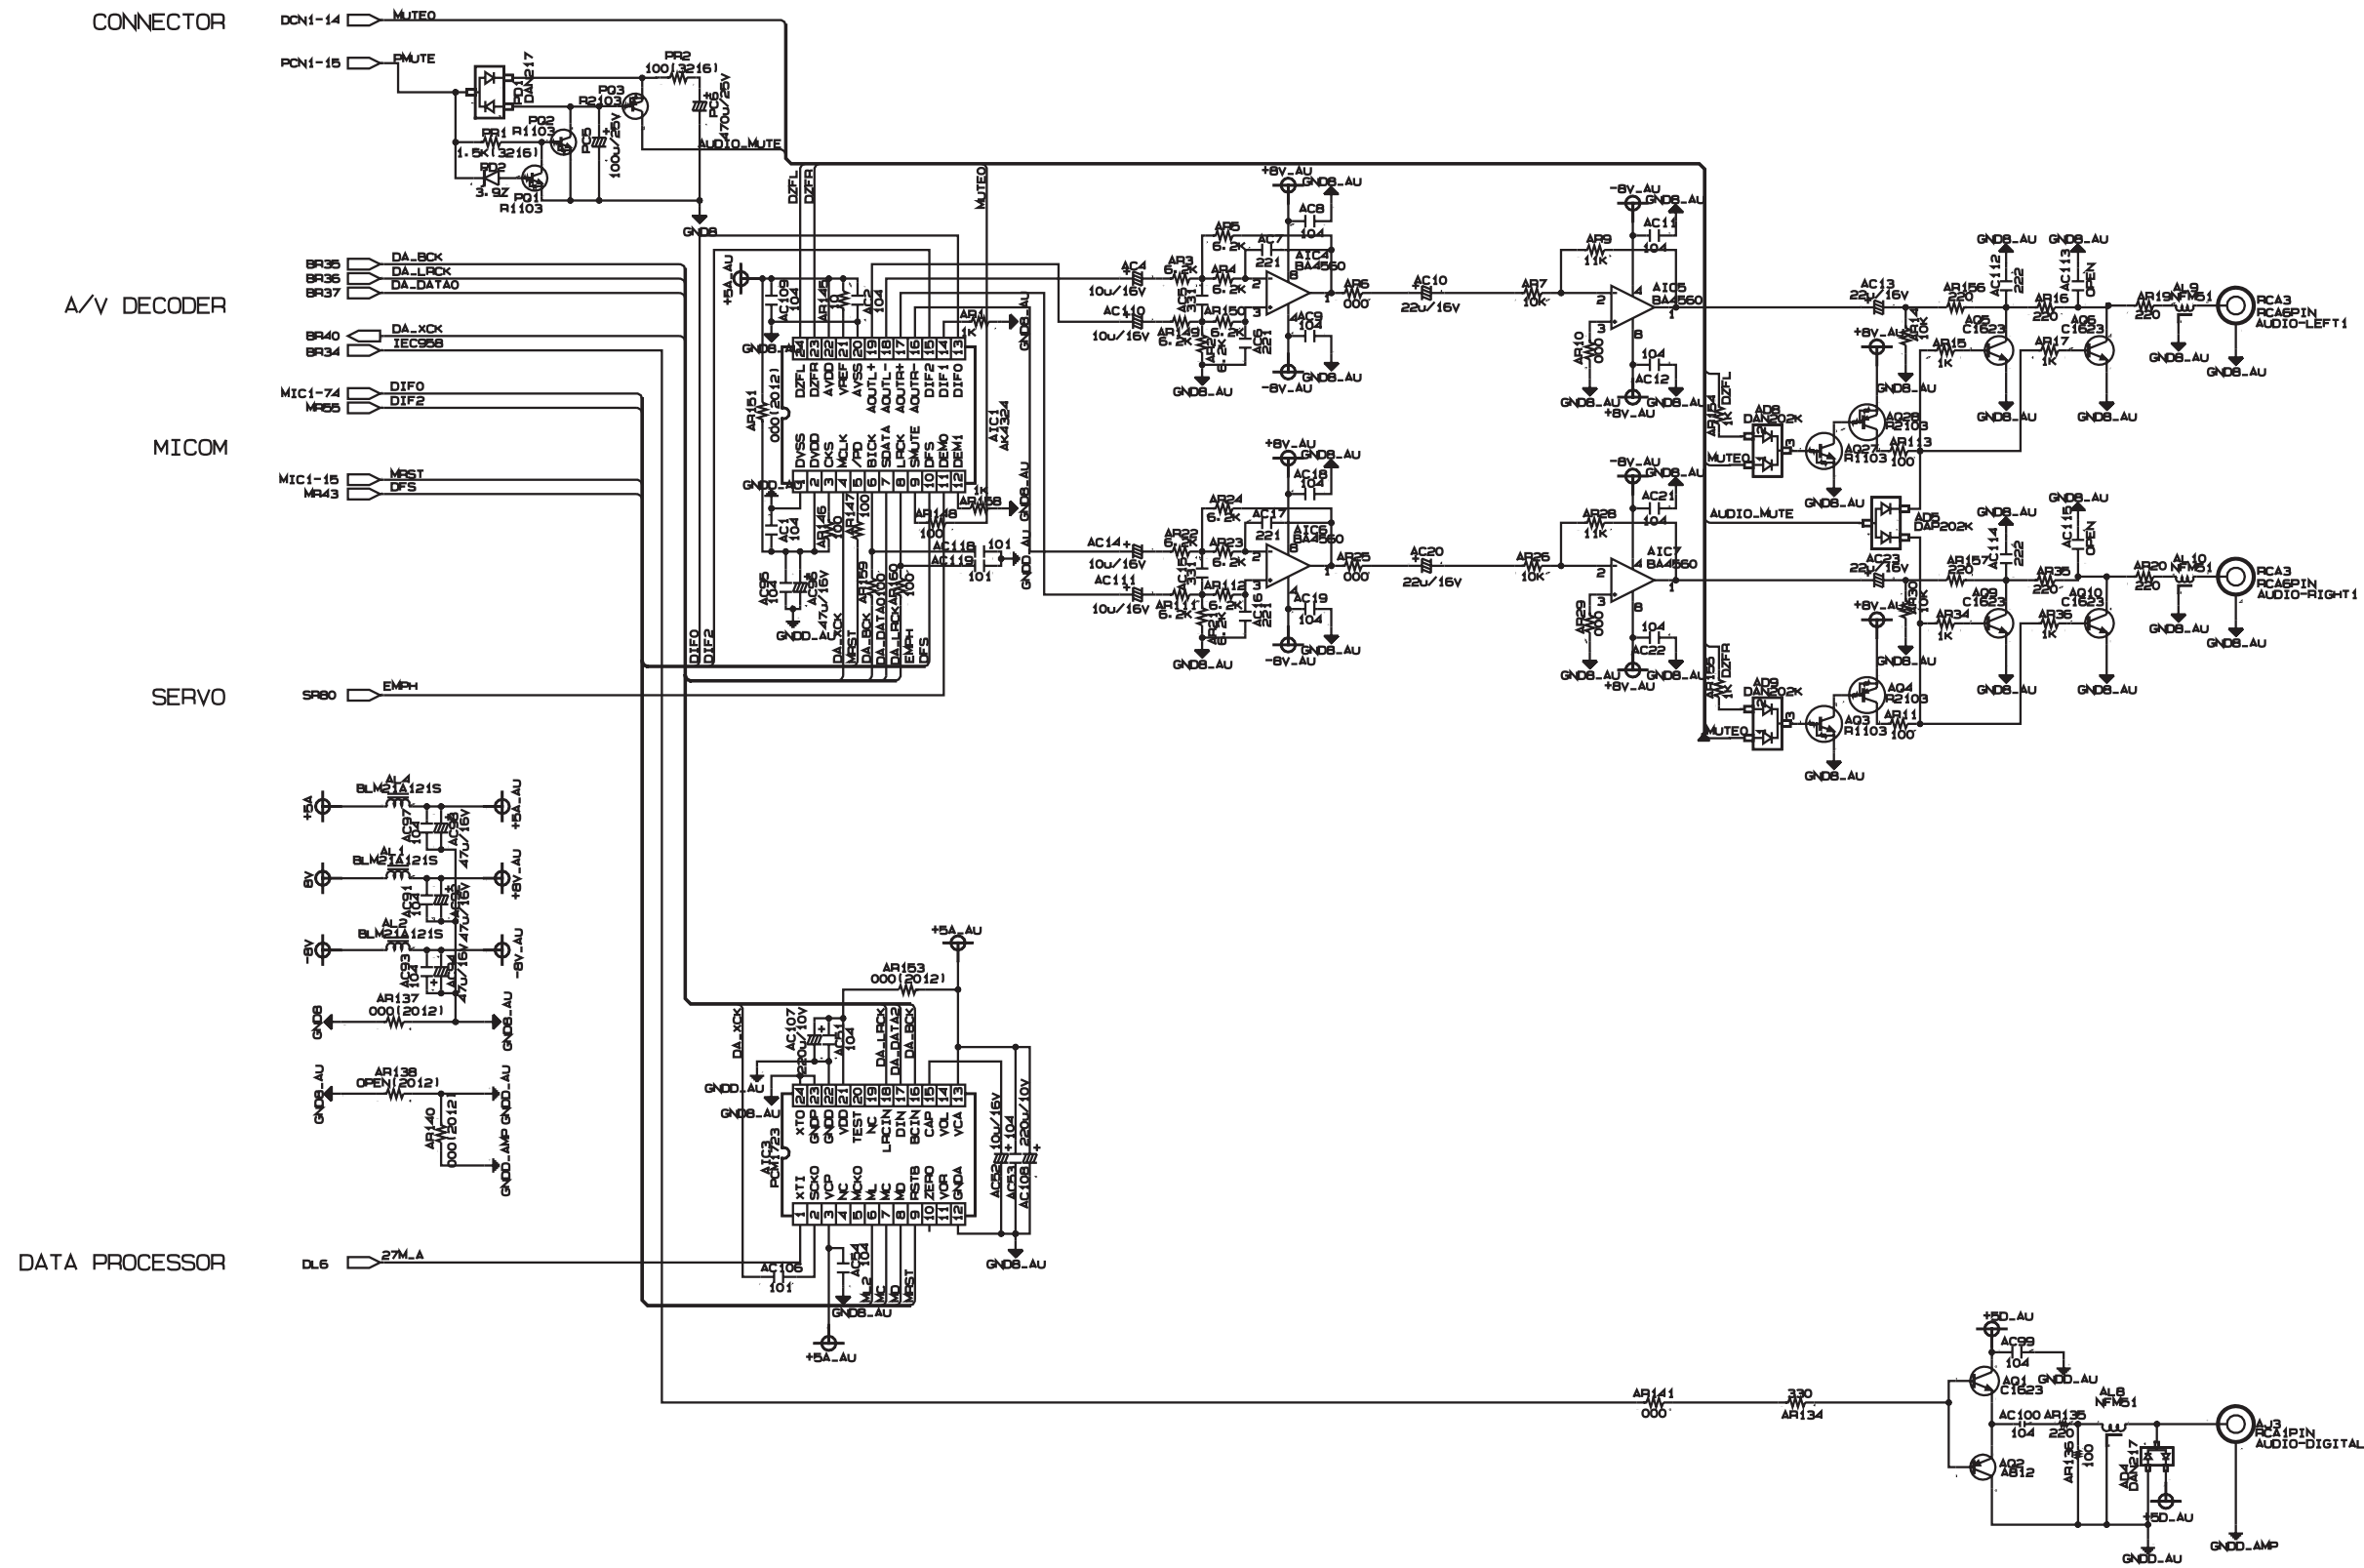


15-5-6-1 VIDEO (DVD-907/927)

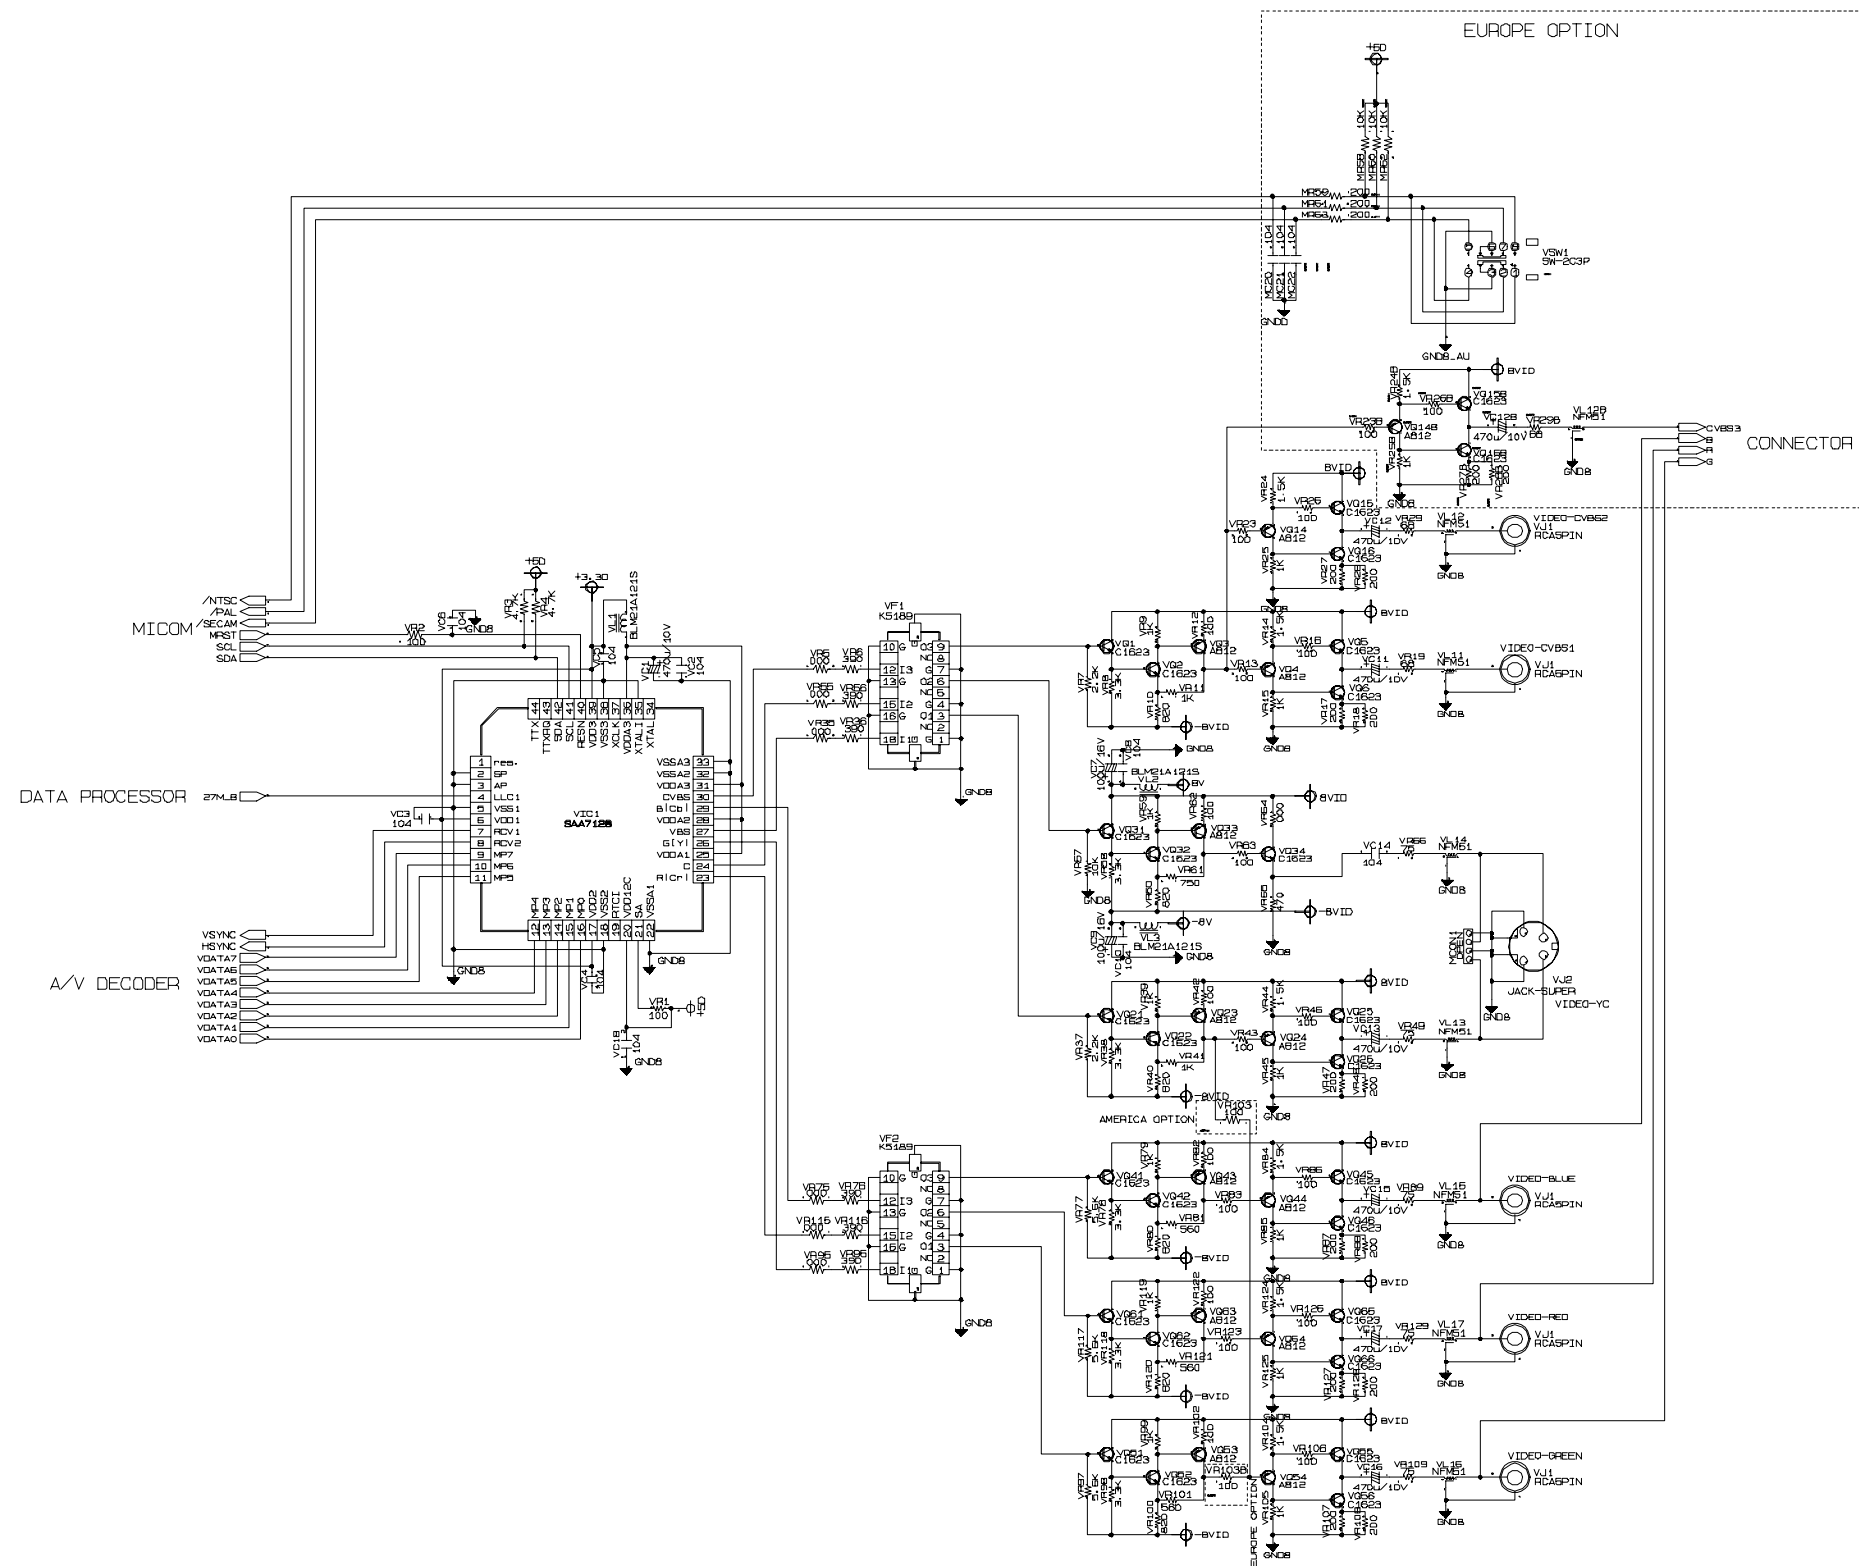


15-5-6-2 VIDEO (DVD-807)

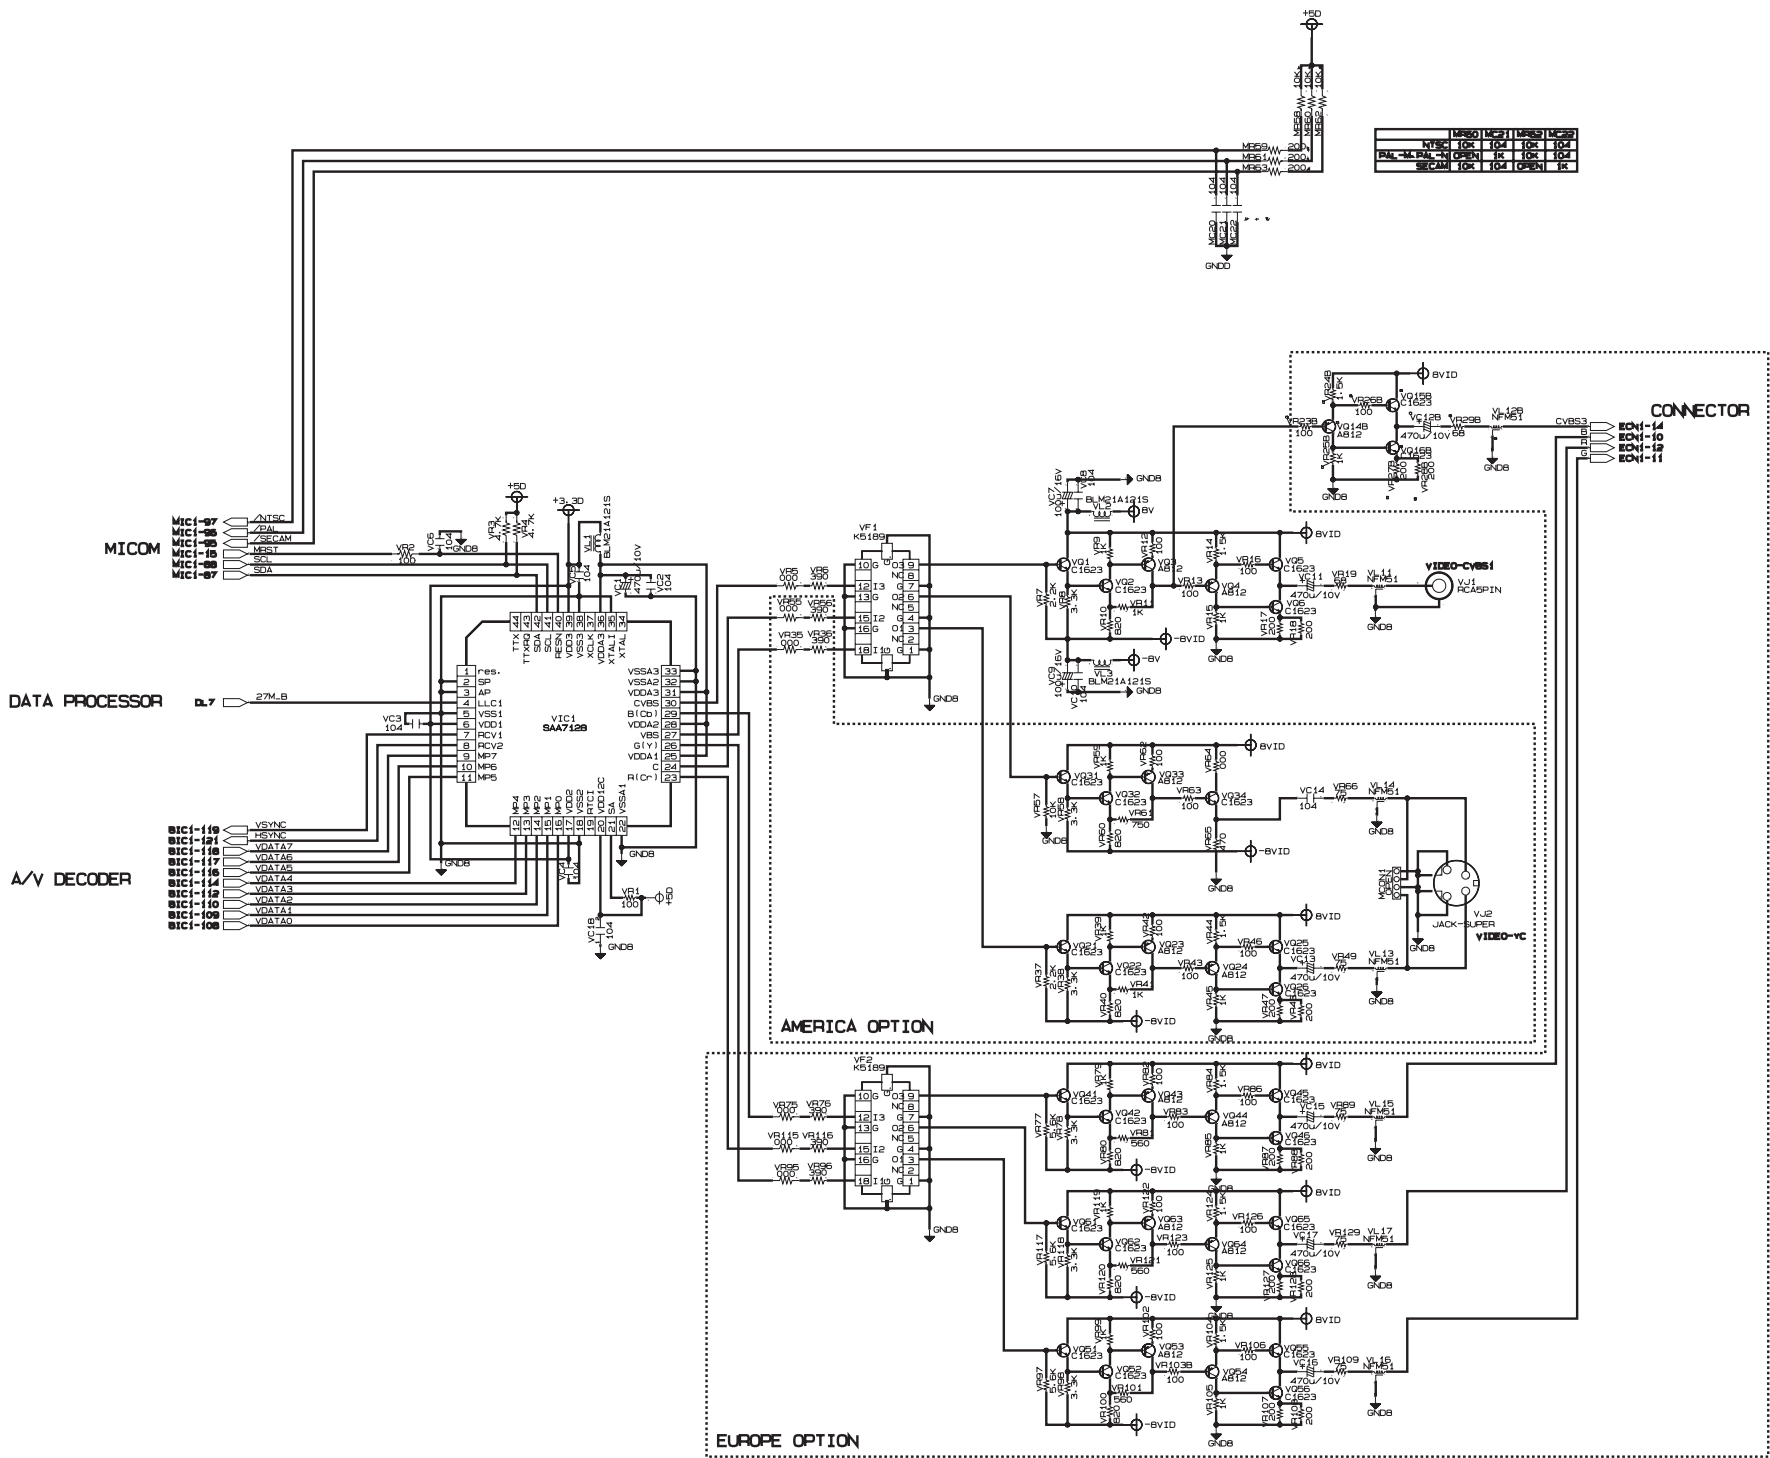

15-5-6-3 VIDEO (DVD-707)

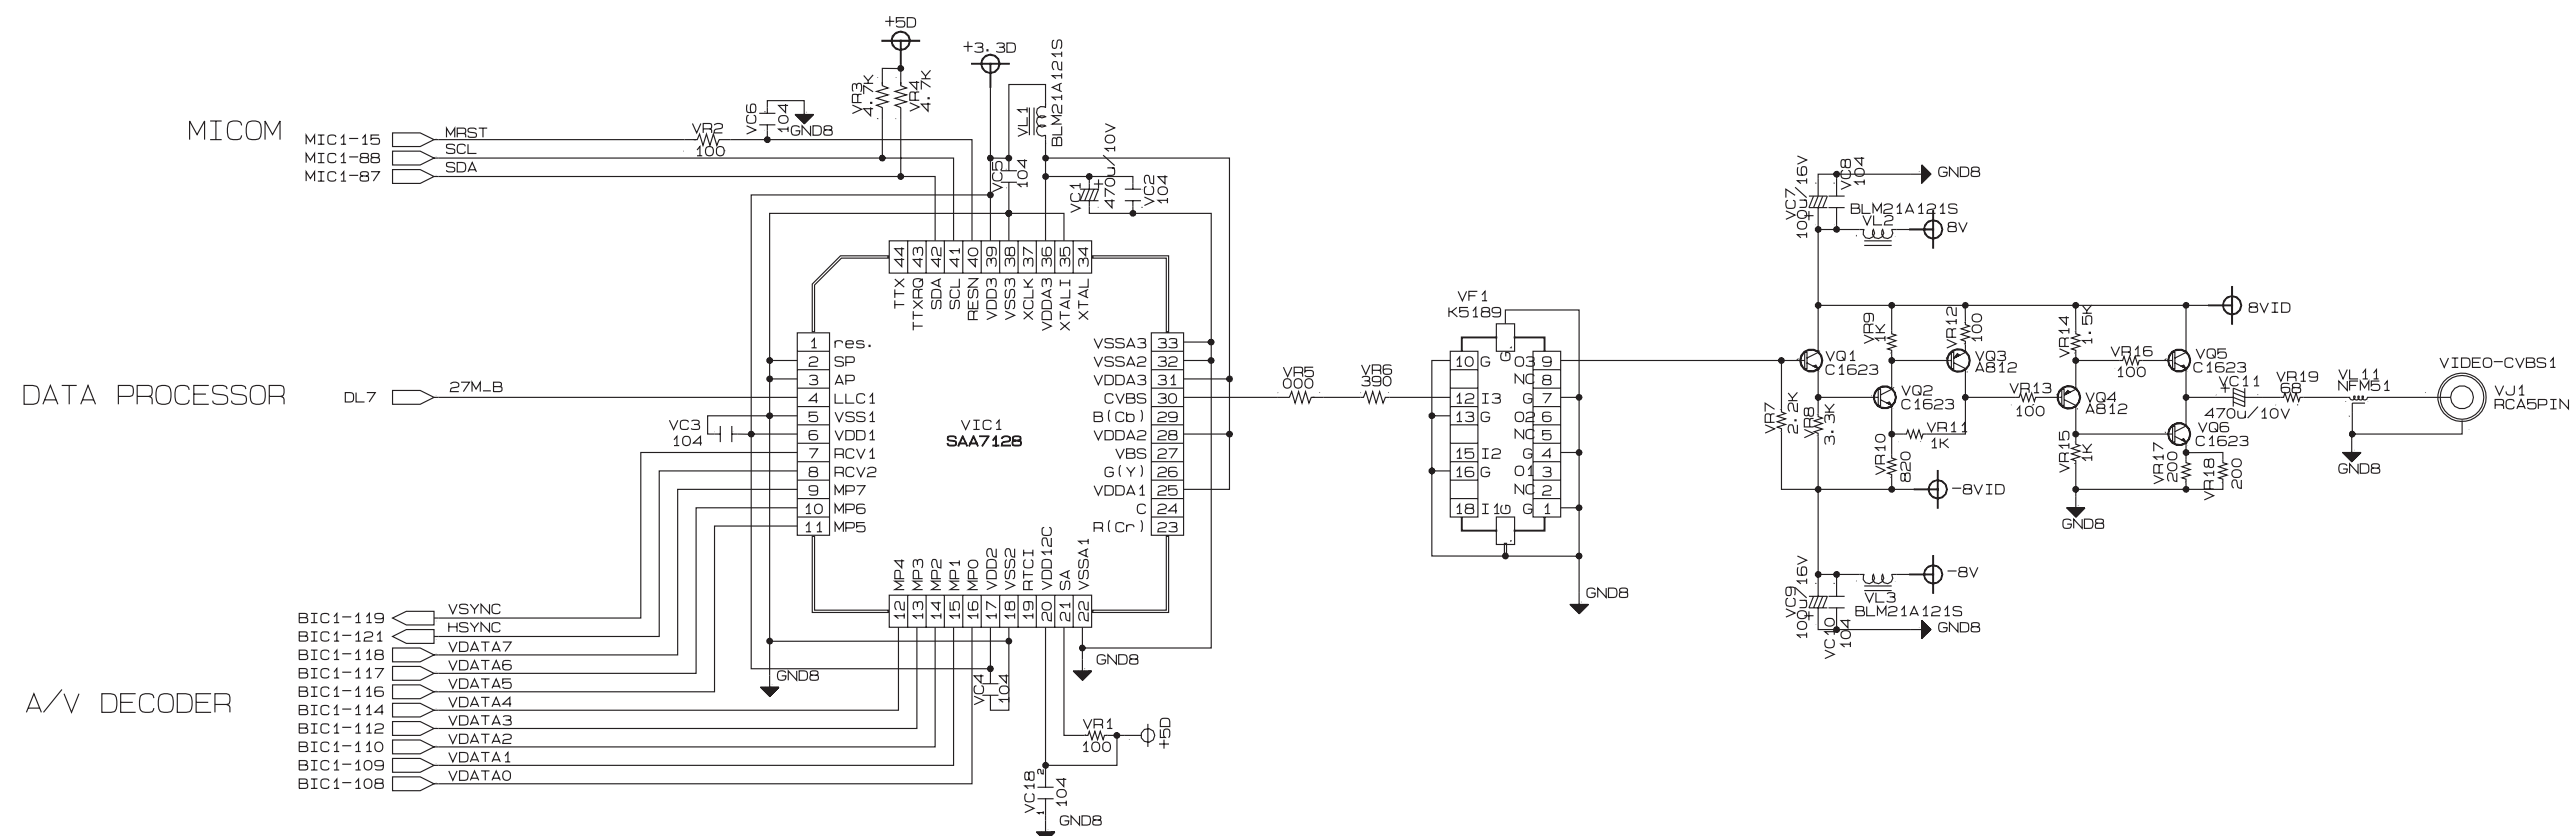

15-5-7 CONNCTOR

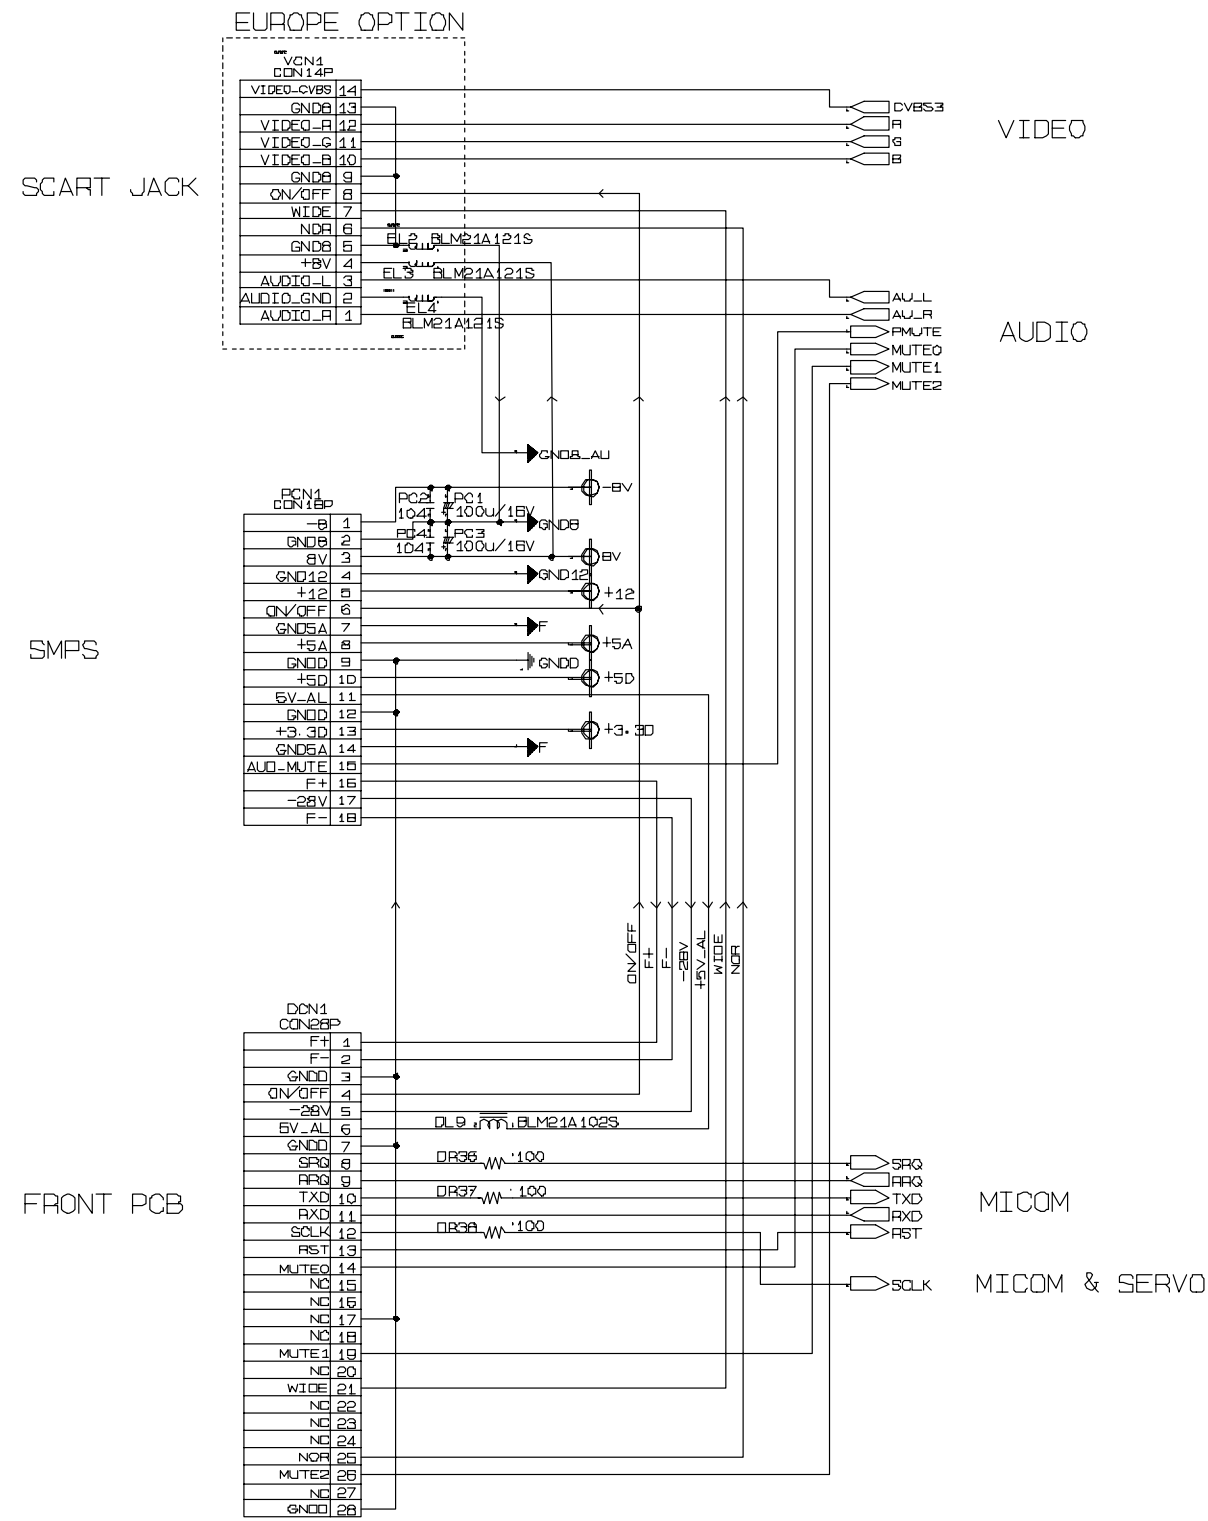

15-6 SCART JACK

